EPTAR ARCHITERRA



Architerra Plus User Guide v5.0

Version for Microsoft Windows and Apple Macintosh C 2024 Éptár Kft.

<u>Copyright</u>

The contents of this guide and the software described herein are the property of Éptár Kft. and copyrighted with all rights reserved.

Copyright laws prohibit the full or partial reproduction of the guide and software programs without the written permission of Éptár Kft., except in the normal use of the software to create a backup copy. This exception does not allow copies to be made for others, whether these be sold, loaned, or given away.

Guarantee Limitations

Although Éptár Kft. has tested the software described in the guide and reviewed its contents, Éptár Kft. provides no express or implied guarantee or statements regarding the software, its quality, performance, or fitness for any particular purpose.

As a result, this software is sold "as is," and the purchaser assumes all risks in relation to its quality and performance.

In no case shall Éptár Kft. hold responsible for direct, indirect, special, incidental, or consequential damages arising from any defect in the software or errors in the guide, even if Éptár Kft. advised of the possibility of such damage.

In particular, Éptár Kft. shall not be liable for the loss of data or the software program from computers, including the costs incurred for recovering or reproducing the data or the program itself.

Licenses and Trademarks

Architerra Plus is a registered trademark of Éptár Kft., Archicad, PlotMaker, topCAD and GDL are registered trademarks of Graphisoft.

Microsoft Windows, Windows 95/98/2000/NT/XP/10/11 are registered trademarks of Microsoft, Inc.

Apple, Macintosh, Power Macintosh and macOS are registered trademarks of Apple Computer, Inc.

AutoCAD, DXF and DWG are registered trademarks of Autodesk, Ind.

Other products and company names may be trademarks or registered trademarks of other companies and used purely for demonstrative purposes in favour of the trademark holder, without intent of breach.

Éptár Kft. HU-1145 Budapest Szugló utca, 61-63. Tel. (+36) 1 225 7355 Internet: <u>www.eptar.hu</u> E-mail: <u>info@eptar.hu</u>



CONTENT

THE ARCHITERRA PLUS PLUG-IN	6
Work methods	6
INSTALLATION OF THE SOLUTION	7
BUYING ARCHITERRA PLUS AND ONLINE ACTIVATION	
ACTIVATION OF THE SOLUTION	8
THE TOOLBOX	
IMPORT MULTIPLE TERRAIN DATA	
TEXT FILE IMPORT (MULTIPLE FILES IMPORT OPTION)	
OVERWRITE ORIGINAL CODE	
IMPORT RESULTS	
DATA FROM DXF FILE (MULTIPLE FILES IMPORT OPTION)	16
Correspondence with the DXF unit system	
Import Results	21
DATA FROM SHP FILE (MULTIPLE FILES IMPORT OPTION)	
CONVERTING ARCHICAD MESH INTO ARCHITERRA PLUS TERRAIN	23
POINTS TOOL	24
INSERT POINTS	
Editing Points	25
CONSTRAINT TOOL	
OUTLINE TOOL	
The search corridor	
OUTLINE ATTRIBUTES	
CALCULATING TERRAIN	
Show Morphology	
CONTOUR LINES TOOL	
DRAWING CONTOUR LINES	
CALCULATING CONTOUR LINES	
COLOUR SLOPS OF MORPHOLOGY	
EXPORTING THE DATA OF A TERRAIN TO A TEXT FILE	
HOW ARCHITERRA PLUS TOOLS MODIFY THE TERRAIN	

🗧 eptar

POLYLINE AND FILL TOOL	
PLATEAU TOOL	
SLOPED PLATEAU	
Modifying plateau	
ROAD AND JUNCTION TOOL	
CREATING A ROAD USING AN ARCHITERRA PLUS POLYLINE	
NEW SETTINGS FOR ROAD:	
CREATING A ROAD USING AN ARCHITERRA PLUS FILL	
Modifying roads Creating road junctions	
ROAD LONGITUDINAL SECTION TOOL	
CONFIGURING LONGITUDINAL SECTION SETTINGS	
MODIFYING ROAD LEVELS USING THE LONGITUDINAL SECTION.	
RAILWAY AND RAILWAY CROSSING	
CREATING A RAILWAY USING AN ARCHITERRA PLUS POLYLINE	
DITCH TOOL	
CURB TOOL	
BRIDGE / RAILWAY BRIDGE TOOL	
PAVEMENT, SIDEWALK TOOL	
Modifying pavements	
GRADIENT TOOL	
RANDOM TREE GENERATION FUNCTIONS	91
CONFIGURING THE 2D TREE SYMBOL	
CHANGING THE PARAMETERS OF A TREE ALREADY INSERTED	96
BASIN TOOL	
BUILDING TOOL	
Modify the buildings	
WALL TOOL	
The altitudes of Architerra Plus Wall nodes	
Modifying Architerra Plus Walls	
RETAINING WALL TOOL	
CREATING A RETAINING WALL	
Modifying Retaining Walls	
CREATING A RETAINING WALL AS AN OBSTACLE	



COLOURED AREA TOOL	
Modifying colored Areas	
MANAGING OVERLAPPING-COLOURED AREAS	
MODIFY X-Y COORDINATES/MODIFY Z COORDINATE TOGGLE	
CALCULATE TOOL	
GRAVITY ON TERRAIN, INSERT OBJECTS	
SPOT HEIGHTS TOOL	
Attributing spot heights to survey points	
Attributing spot heights to the terrain	
CREATING MAPS WITH SPOT HEIGHTS	
CAMERA TOOL	
ARCHITERRA PLUS TOOL DEFAULT SETTINGS	
HELP TOOL	
APPENDIX	
DATA UPDATE TOOL	
UPDATING ALTITUDES	
UPDATING ARCHITERRA PLUS WALLS	
UPDATING THE ELEMENT PREVIEW	
UPDATING A BASIN	
UPDATING A ROAD LONGITUDINAL SECTION	
UPDATING ALL ELEMENTS	
ARCHITERRA PLUS LIBRARY ELEMENTS	
FURTHER CHARACTERISTICS OF THE ARCHITERRA PLUS WALL	
FENCE FUNCTION	
GUARDRAIL FUNCTION	
CUSTOMIZING TRUNKS AND LEAVES	
Trunks	
Spiral trunk	
LEAVES	
Star frond	
PROBLEMS WITH SOLID ELEMENTS OPERATIONS	
SOSI FILES IMPORT (MULTIPLE FILES IMPORT OPTION)	
INDEPENDENT WORKSHEET	
TERRAIN SURVEY TO SOSI FILE	
CONVERT SOSI ENTITIES TO GDL OBJECTS	

🗧 eptar

The Architerra Plus Plug-in

Terrain Modelling

Work methods

Depending on the needs, work to define the terrain is essentially based on two different methods (although they are often used together).

Interactive manual insertion method

In this mode, the operator uses the Architerra Plus basics (points, constraints, and contour lines) to plot the land morphology. In a common typical example, the user has a bitmap format digital map of the work area.

After correctly importing and scaling the image using the Archicad*Figure tool*, the map can used as a reference base to "trace" the necessary data to describe the terrain (plotting altitude points, defining constraints and creating contour lines).

Manual mode can obviously also be used to define new train with the morphology required by the user.

Data import method


The user often already has a description of the terrain in electronic format (lists of points or DXF drawings) deriving from collaboration with surveyors or land survey studios.

In such a case, the model is created by importing these documents and automatically transforming the data they contain into Architerra Plus primitives. During importation, it is however important to verify the compatibility of the formats received and if necessary, simplify the data by using the filters available in the Architerra Plus import functions.



Installation of the solution

The Architerra Plus Plug-in is available in Éptár website for Archicad in the versions 23, 24, 25, 26 and 27. To install the program, start the installation file and follow the instructions. The plugin will be included to Add-on folder of Graphisoft.

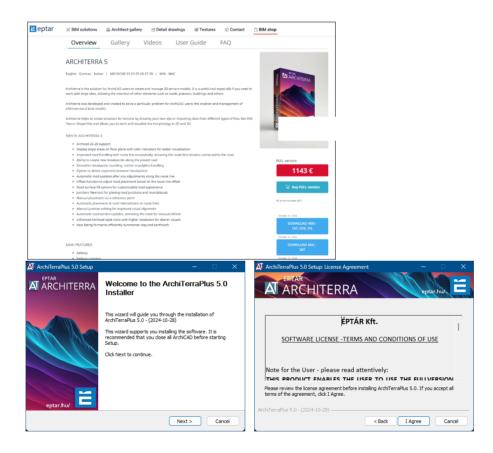



elected versions will be installed/upd	lated.
ArchiCAD Version	Location
ArchiCAD 27.0.0 NOR R 1	D:\Programok\GRAPHISOFT\Archicad 27 NOR
ArchiCAD 27.0.0 POR R1	D: Programok \GRAPHISOFT \Archicad 27 POR
ArchiCAD 27.0.0 RUS R 1	D:\Programok\GRAPHISOFT\Archicad 27 RUS
ArchiCAD 28.0.0 GER R 1	D:\Programok\GRAPHISOFT\Archicad 28 GER
ArchiCAD 28.0.0 HUN R 1	D:\Programok\GRAPHISOFT\Archicad 28 HUN
ArchiCAD 28.0.0 INT R1	D:\Programok\GRAPHISOFT\Archicad 28
ArchiCAD 28.0.0 ITA R1	D:\Programok\GRAPHISOFT\Archicad 28 ITA
ArchiCAD 28.0.0 NOR R 1	D:\Programok\GRAPHISOFT\Archicad 28 NOR

ļ.	ArchiTerraPlus
Į.	BIMx
ļ.	EnergyEvaluation
ļ.	Extras
ļ.	GDL
	Import-Export
ļ.	Local
	MEP Modeler
Į.	NORKART
	RFA and RVT Geometry Exchange
Į.	Standard
ļ.	Visualisation
	profiles.sdb
	XReadCfg.txt

Buying Architerra Plus and online activation

To start using Architerra Plus properly, the add-on needs to be purchased and activated. In this case, you just need to follow a few steps in the Éptár website.

- 1. Register in <u>https://www.eptar.hu/</u>. If you already have a registration on the website, just login.
- 2. Once logged, go to BIM shop, and select Architerra Plus .
- 3. To purchase, click on "*Buy now*" button. You can pay via PayPal, even if you do not own a PayPal account, you can still give the requested data and pay.
- 4. After purchasing Architerra Plus , the product appears in your user account and on the download page as well.

You can also purchase and ask to activate Architerra Plus our partner in your country.

Activation of the solution

To activate the Architerra Plus plugin your computer should have an active internet connection.

IMPORTANT:

The machine key is already NOT supported. During the next upgrade the machine key will be terminated and switched to an online key option.



Online Key

After start Archicad, in *EPTAR Solution* menu choose Registration in the *Architerra Plus* button. Then follow the steps for Online Key Validation like in the pictures below.

📔 ÉPTÁR Solutions Registration ? 🗙	📔 ÉPTÁR Solutions Registration ? 🗙
Welcome to ÉPTÁR Solutions Registration Wizard.	You must log in to unlock the full version.
Please choose from the following:	Please enter your credentials received from Éptár Kft. after your purchase was done.
◯ Start a new registration process	
Validate an already purchased key	User name:
	Password:
	Save password on this machine
Cancel Next	Cancel Next

Borrowing the license

We present you a new option for online key. This option is not free, it is possible to by for each licenses what you have. Buying it for one license it will work only with this license. How it's workin:

- after you registered an Architerra Plus online key open a Registration again
- click on "Next" button and if you receive a message "Congratulation!", your license is switch succesfully to "offline" mod for 7 calendar days, that means you can use your license without online connection during a week. After the time is running out, the license switches back to online mode.

	model				
	T ÉPTÁR Solutions Registration ?	¢ (ÉPTÁR Solutions Registration	?	×
	Validation Status of ÉPTÁR Solutions		Congratulations!		
	You have a valid online key.		Borrowing of your key has succesfully started.		
	For borrowing your online key onto local machine, click Next				
ÉPTÁR Solutions Help					
ArchiTerraPlus 🕨 🗮 Show ArchiTerraPlus Palette					
Reinforcement Language					
About					
?→ Registration	Cancel Next		Finis	h	

If you buy this option and it does not work, please contact to the ÉPTÁR support: info@eptar.hu



The Toolbox

Architerra Plus toolbox is revised, now it is in Archicad style, and it is possible to dock vertically on the left and right sides of Archicad work area. It is also divided into four phases of work and two additional procedures often used during the work.

×	×	×	×	×
ArchiTerra 5.0	ArchiTerra 5.0	ArchiTerra 5.0	ArchiTerra 5.0	ArchiTerra 5.0
* 🚫 Import	Import	 Import 	 Import 	\bigcirc
TXT file Import	▼ 🖏 Earthmoving	Earthmoving	Earthmoving	TXT L
DXF file Import	C Polygon	🔻 📣 Urban	🕨 🛷 Urban	
SHAPE file Import	🛒 Hatch	V Polygon	 Settings 	SHP
Point	Nateau Plateau	🛒 Hatch	Calculate	!
្លំ Constraint	Road	Trees	Gravity on terrain	
Vitine Outline	Road junction	Basin	→ ¹² Spot heights	*
Terrain	Road longitudinal s	Building	🔊 Camera path	
Contour lines	Fridge Bridge	🧼 Wall	Default settings	\bigotimes
Slope analysis	Sidewalk 🧼	Retaining wall	Show coordinates	\bigotimes
TXT file Export	🇼 Ditch	🗢 Coloured area	0	1
Earthmoving	🧼 Curb	🕗 Edit X-Y / Edit Z	0	8
🕨 🚸 Urban	Railway	Settings	0	
Settings	🚰 Gradient	Z Show coordinates	,⊖• Data update	Z
Show coordinates	🕨 🛷 Urban	0	? Help	1
0	Settings	0		0
0	Show coordinates	0		0
0	0	,⊖• Data update		0
Data update	0	? Help		2
? Help	0			?
	. → Data update			
	? Help			
				.:)

NOTE ON THE COORDINATES:

Archicad does not allow us to continuously access the coordinates, so it was necessary to do a workaround. With the pick-up tool the user can temporarily approach the coordinate system and examine the terrain heights but must do a click to exit the procedure. Anyway, choosing this way, it gave on top of that the possibilities to examine the heights on working fields as well – therefore not only the meshes.



Import multiple terrain data

Below of this section all import methods will be explained in detail. But before starting the import, some new information about it:

- against the earlier version, the v4.0 can import and handle not only one terrain data file.
- the imports should be done step by step:
 - import one terrain file as the import is explained in next section (TXT, DXF, SHP, etc), and create an outline, then create the terrain model
 - o import the second terrain data file (TXT, DXF, SHP, etc)
 - when you want to create the outline of second terrain, the program asks, what to do with previous outline: substitute it or keep it. If you keep it, the second terrain outline will NOT be created.
 - selecting the "Substitute" option, the program will delete the first outline and creates the new one for second terrain.



- clicking on Terrain tool the second terrain object will be created
- this import process can be repeated as many times you'd like to do.









Text File Import (multiple files import option)

To import a list of points, click on the Import TXT icon.

Architerra Plus displays a standard Open dialog box where the user can locate and select the text document to import.

Architerra Plus immediately displays the *Text file import dialog box* to configure importation of the file. The preview area at the top shows the contents of the first lines of the text file.

The options box can be used to configure a number of characteristics for the import to be performed:

🔼 Text File	e import					?	×
Text file pro	eview						
-170» 101» 106» 182» 184»	-150» -150» -150» -150» -150»	-0 5 4 -0 6					
Imported D	ata Preview						
-170 101 106 182 184	-150 -150 -150 -150 -150	5 4	0				
Options:							
Conversi Format:	separator: er:			meter x y z dot tab 100		~	> >
Imported P							
60 %	Overwrit	e original co	ode				
Code:	Point		0000	1	Ų	4	
	● 71 B	earbeidet te	rreng				Þ
					Cancel		OK



Skip the first row.

Often the first row of a text file is explanatory, giving the names of the subsequent fields. Activating this checkbox avoids importing this data.

Reverse x-y

When the last checkbox (**reverse x-y**) is activated, the import order of the two X and Y coordinates is inverted.

Format

In a popup menu will be defined the order of the coordinates.

Decimal separator

The user can choose between separators (dot or comma).

Delimiter

In most of cases, the delimiter used is a TAB, but it can be chosen between appropriate delimiters.

Tab: There is one TAB between each field.

Semicolon: There is one ";" between each field.

- *Three or more spaces*: There are at least three spaces between each field (or any greater number).
- *Other*: When this option is activated, the text field on the right is enabled for the user to enter the required delimiter character (when this is not shown above).

IMPORTANT:

If Architerra Plus refuses to import the selected text file, the user can try to open the file using a simple electronic spreadsheet to verify the arrangement of the contents of the fields within the individual cells.

Filter Distance

This field is used to define filter distance in order to avoid importing excessively close points.



TIP:

The simpler the mesh, the better Archicad's performance will be. Mesh with more than 7000 points (obviously this value depends on the hardware configuration) slows down Archicad and all operations associated with 3D view considerably.

The Imported Points box can be used to define particular options for the points (hotspots containing additional information) to be inserted in the *Archicad* worksheet.

Overwrite original code

When the user activates this checkbox, the two fields below can be used to define the data, creating a personal code to be assigned to each imported point (overwriting any data already present), where the first field takes an optional alphanumeric string (max 20 characters) and the second, a progressive number. The code will be a combination of these data.

. <i>1</i> 9	Overwrite original co	de
Code:	Point	00001

Import results

After reading the contents of the text file, Architerra Plus displays the *Import Results* dialog box showing the results of the import operation performed.

The Imported Points section lists the number of points contained in the original text file, the number of points imported into the worksheet and the number of points skipped.

The difference between the points imported and the points read depends on the configuration of the Filter option.

If the number of points imported is excessively large (a warning image appears on the right), the user can click on the "Import Again... button" to return to the previous dialog window and change the filter value to simplify the number of data to be imported. In the Terrain Location area there will be the X-Y coordinates of the two corners (bottom left and top right) of the rectangle containing the terrain to be imported.

If the relief is georeferenced, the position of the terrain could be very distant from the Archicad origin, and this could cause view and processing problems.



Import results		? X	
Imported Points:			
read: imported: skipped:	952 931 21	CR. PO	
Import agair	n		
Ferrain position:			
	Use previous offse	t	
Import area		x max:	
x min: -170000		286000 y max: 250000	
y min: -150000			
	[Cancel OK	

This can be resolved by using the two fields below in the Terrain position section to shift the data and reposition them near the origin: Delta X and Delta Y are the two values used to position the terrain.

Negative values will produce a shift towards the left and downwards, while positive values produce a shift towards the right and upwards.

IMPORTANT:

Do not undervalue this characteristic. Terrain distant from the origin could cause various problems during use of Archicad.

The last section at the bottom, Import area enables the user to import part of the data only, defining the limits using the four coordinates below:

Import results					?	×
mported Points:						
read: imported: skipped:		952 931 21		P	LUL .	2
Import agai	n				X	
errain position:						
	Use p	revious	offset			
Import area				x m	ax:	
				286	5000	
x min:	in. Ymin	47 (A C	nax, Yma		iax: 0000	
y min:	11/1///	<u> </u>		2214	1	C,
-150000						
				Cancel		ОК

When this option is activated, it allows to import an area which the user can define, through the four activated fields (Xmin, Ymin, Xmax and Ymax).



Data from DXF file (multiple files import option)

DXF (Drawing eXchange Format) was developed by Autodesk for data exchange between different CAD programs.

Architerra Plus reads DXF in text format (the most common) but is not compatible with DXF binaries.

A DXF drawing is structured in layers (as with Archicad) and all graphic information is contained in the different original layers.

Architerra Plus reads and imports the following primitives from DXF drawings:

Point: Point-type primitive, generally used to describe a typographic point.

Line: Line-type primitive.

Polyline: Polyline-type primitive, a split line made up of a series of consecutive segments.

Lwpolyline: Polyline-type primitive, a split line made up of a series of consecutive segments with a thickness configuration.

Spline: Primitive describing a curve (similar to Archicad splines).

IMPORTANT:

Architerra Plus cannot import DXF blocks (the equivalent of Archicad library parts). If the survey points have been created using such blocks, they cannot be imported.

An important rule to always remember is that the aim is to import ONLY the information useful to describe the terrain. Therefore, the user should use the layer hierarchy in the DXF document with care and only import from the useful layers: the rest can be imported using Archicad if necessary.

The terrain is mainly defined through points (nodes) and graphic primitives describing contour lines, which could also be identified as constraints, determining the way in which the triangulation is mapped.



TIP:

Before use Architerra Plus to import DXF, the user can ask the supplier for a table describing the function of the layers and the type of information they contain. If this is not available, first import the DXF file using Archicad and check which layer contains the primitives that wish to import. Take note of these layers and import the DXF file again using Architerra Plus, activating only the layers in question.

NOTE:

Always remember that the DXF document MUST contain three-dimensional information, in other words, the terrain description must include a "Z" coordinate.

Click on the Import DXF File icon to import a DXF drawing.

Architerra Plus immediately displays a standard open dialog box where the user can locate and select the DXF document to import.

Then Architerra Plus will display the DXF File Import dialog box:

🔼 DXF File import		×
Select the layers containing the survey only:		
		۲. ۲
PLINE001		~
Translate a DXF unit in: 1000,000	mm incl	
Filter Distance:		
* 100 🔼	100	
Points:		
Code: Point 00001	4	
Constraints:		
U 64 Solid Line		Þ
Cancel		ОК

The central area displays a list of all layers.


There are two checkboxes next to each name regulating the treatment of the layer in question.

The first Import from Selected Layers checkbox activate/deactivates the layer import. Information contained in the layer will only be imported if this box is ticked, otherwise the information in the layer will be ignored.



The second (Create Constraints) checkbox determines how to import the graphic parts of the layer.

If the checkbox is not ticked, Architerra Plus imports the primitives by simply reading the extreme coordinates and inserting Architerra Plus points/hotspots in their place.

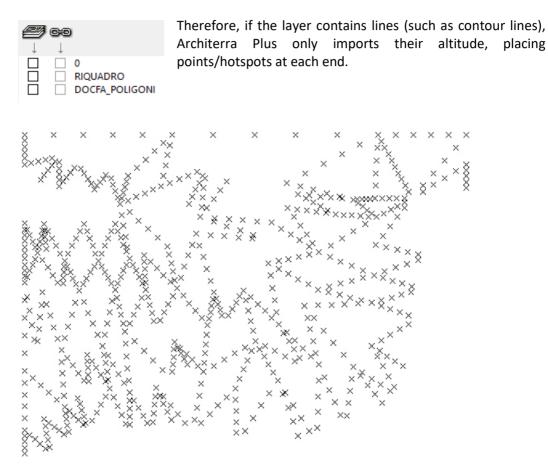


When the box is ticked, Architerra Plus also imports the graphic primitives, transforming them into Architerra Plus constraints (the description of the constraint tool is further on).



The result of the import will be a series of points/hotspots connected by constraints.



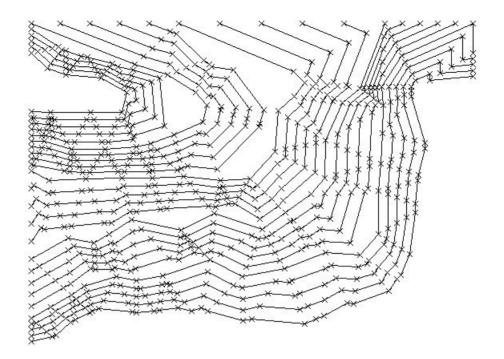

In this case (Create Constraints) it is useful to group together elements imported from the same primitive: for example, all points and constraints deriving from the same polyline.



Tick the check-box Group in the upper right part of the window to group these elements together.

TIP:

By clicking on the two icons in the upper part of the layer list window (icon with layers and icon with chain) it ticks all check-boxes for all the layers listed with a single click.



The two icons correspond respectively to the commands:

- Import from all layers.
 - Create constraints from all layers.

Correspondence with the DXF unit system

Under the list of layers, users can define the unit system for the DXF drawing as do for Archicad (for further information on the concept of unit systems, refer to the Archicad - DWG Conversion Guide).



Filter Distance

The instructions given above for importing text files is even more indispensable for DXF models.



These two fields are similar to those used to import lists of points (TXT Files), allowing to simplify

data in the import phase. The distance set is used to filter the points imported. Points falling within this distance are deleted and not imported.

NOTES:

As seen above, users can also set the filter after the first reading of the file, as it will probably not know at the beginning how many points are in the file to be read.

The first value, on the left, defines the filter distance for importing points and works exactly as described for text file imports.

The second value is used to simplify polylines. By setting an adequate distance, it can considerably simplify a polyline of thousands of points without losing any important information in the description of the morphology.

Points

In this section, the user can use the two fields below to define data to create their personal code to be assigned to each imported points.

Code:	Point	00001	_	4	

The first field takes an optional alphanumeric string (max 20 characters) and the second, a

progressive number. The code will be a combination of these data. Immediately on the right, it can be chosen the pen to represent the imported hotspots.

Constraints

64	Solid Line

In this section, define the pen and line type used to represent the constraints/lines imported.

NOTES:

When importing data from DXF drawings, do not have to select any layer for the imported primitives as they will be stored in the same layers as in the DXF drawing.



Import Results


After reading the contents of a DXF drawing, Architerra Plus displays the *Import Results dialog box* similar to the TXT described before, showing the results of the import operation performed and enabling users to make additional settings to optimize the results of the DXF drawing.

Data from SHP file (multiple files import option)

SHP or Shape file format is a geospatial vector data format for geographical information system (GIS) software.

Architerra Plus reads this data and convert it into 2D and 3D element.

Click on SHP icon in the Architerra Plus toolbar the "Import shapefile" window appears, and there are two options:

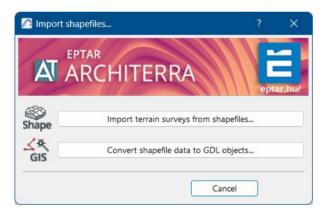

Import terrain surveys from shapefiles...:

- clicking on this option the Open window appears, where you can find the required SHP file. Select it and click on Open button.
- the Import results window appear where you can see how many points are imported, and you can set the Origin, if necessary.
 Note: if the imported data will be placed too far from the Archicad origin, then it is possible some anomalies can appear. It is because the Archicad has some limitations

in it. Depending on your request, it is supposed to set the "X min" and "Y min" values

- for zero or near of it.
- click on OK, and the import process starts.




- after the import is finished, all points are visible on the floor plan, and you can convert it to the necessary terrain model.

Convert shapefile data to GDL objects...:

- clicking on this option the Open window appears and you can select the file for import

Identified elements:	18034
Importable elements:	18034
Elements to be corrected:	0
ta position:	
Use p	previous offset
Import area x min: 319547821 y min: 4847953048 Selement management:	x max: 32597522 y max: 4854946324
GIS object to be used:	none of these
Polyline node minimum distance:	25000

- then the Import settings appears again. Click on OK.
- In the next window you can select, what data will be imported for object

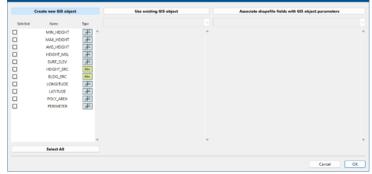

- in the next window you can give the name for this object, then click on OK.

🔼 Name new object			
Buildings			_
	Cancel	0	ĸ

- all elements from the SHP data file will be converted to GSM objects.



Converting Archicad Mesh into Architerra Plus Terrain


From the version 5.0 the converting procedure is already not necessary. This version can use a simple Mesh of Archicad as a terrain model. As on the Architerra Plus tools palette is visible, the "Transfer Archicad Mesh" tool icon is already missing. So, all described operation below is not necessary anymore.

This procedure can be used to convert a simple ARCHICAD mesh into an Architerra Plus terrain/mesh. It will therefore be able to use all the tools provided by the program to modify your original mesh.

The procedure uses the following steps:

- 1. On the worksheet, select the ARCHICAD mesh to be converted.
- 2. Click on the Terrain tool in the Architerra Plus toolbox and the program will display the *Mesh conversion dialog box*.
- 3. Click on Convert to transform the Mesh into Architerra Plus Terrain.

4. Manage the changes in the terrain using the available tools in the Architerra Plus toolbox.

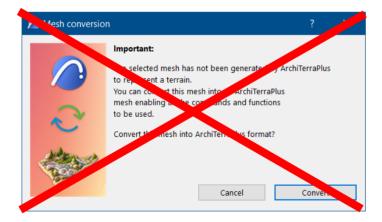

NOTE:

As far as in Architerra Plus only one terrain at a time is able to exist, it is not possible to use this tool when there already exists a calculated terrain.



Points Tool

Architerra Plus uses simple hotspots to represent the points, enabling complex terrains to be handled without overburdening. Do not confuse simple hotspots inserted using the relevant tool from the Archicad palette with those inserted manually using the Architerra Plus Points tool.

The hotspots inserted using Architerra Plus contain added information - the altitude and identification code of the point.

There are two dialog boxes associated with this tool:

- One to edit the points/hotspots already included in the map;
- One to create/insert new hotspots.

Insert points

By clicking on the Point tool without selecting a point, the user start inserting points on the worksheet and Architerra Plus displays the *Point settings dialog box*:



This starts the point insertion cycle and each time clicking on the worksheet, a new point with the characteristics defined in this box is inserted.

The following characteristics can be defined in the box and then associated with the Architerra Plus points:

Code: As described above, an alphanumerical string and a number (increasing automatically) can be defined to identify the next point created.

Layer: From the relative pop-up menu, select the layer where the next point will be stored.

Project Zero: In this field it can be defined the Z coordinate of the point.

Pen: The pen to be used for the next point created on the Archicad worksheet.



Editing Points

If one of the points already inserted manually or imported using the tools described above is selected and the user then click on the Point tool, Architerra Plus will display the *Point settings dialog box* with the settings for the point selected:


🔼 Point settings		?	×
AT ARC	HITERRA	ep	tar.hu/
		Editing	1 entities
	Project zero 9000		
Code: Comment:	480,	00121	
2D_U	44		
	• 71 Bearbeidet ter	reng	•
	Cancel		ОК

Despite the different layout, the information displayed is the same as that described above.



Constraint tool

Constraints are used to form triangulation, linking two or more points following the specifications defined by the user.

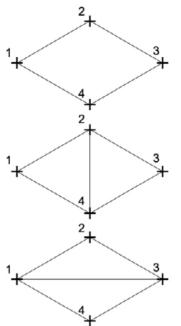

In the terrain processing phase, Architerra Plus takes account of the constraints inserted, providing the triangulation requested.

Do not confuse the plain lines inserted using Archicad and those transformed using Architerra Plus . The last contains important information for terrain processing.

Constraint settings		×
AT ARCHITERRA	et	btar.hu/
		Creation
Force Triangulation		
Solid Line 2D L	64	
T1 Bearbeidet terreng		
Cance	I	OK



The Constraint dialog box offers the following options:

Line type: The type of line used to represent the constraint.

Pen: The pen used to draw the constraint.

Layer: The layer where the constraint is inserted.

To use the constraint tool, follow the steps below:

- 1. Click on the Constraints tool icon;
- 2. Configure the tool settings;
- 3. Confirm with the OK button;
- 4. Draw a polyline on the map joining the constraint points;

NOTE:

The Constrain tool is one of the few procedures where the instrument is activated after the OK.



Outline tool

Before generating the 3D terrain model, the user must first define its outline or external perimeter.

By clicking on the Outline tool, the *Outline settings box* will open, similar with the picture below.

Outline settings	?	×
	ep	tar.hu/
		Creation
Search Type		
click click click click click click click		click
Search corridor settings		
d 24263 3 0	,000°	
Outline Showing		
2D U 13		
T1 Bearbeidet terreng		Þ
ID: OUTLINE		
Cancel		ОК

The drawing option using the two buttons on the dialog box can be chosen to define the type of outline: polygon or rectangle.

The two procedures for manual outline drawing are:



Polygonal: With a polyline it draw a rough perimeter to define a search corridor, where the final outline will be calculated automatically.



Rectangular: It approximate the outline by a rectangle shape where Architerra Plus will calculate the final outline.



The search corridor

Users can define the specific parameters for this procedure in the *Outline settings dialog box*.

2000	α 30.00°	
------	--------------------	--


d (distance between guidelines): determines the width of the search corridor.

Alfa (search angle): Architerra Plus uses this information to select the next point to join to generate the outline.

In the first picture, point 3 could be connected either with point 4 or with point 5.

The size of the search angle determines the choice. With a small search angle, point 3 will be connected to point 5 as point 4 does not fall within the angle.

With a large search angle, point 3 will be connected to point 4.

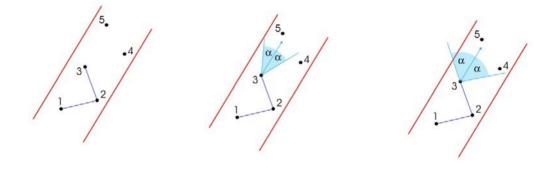

TIP:

Large angles produce uneven outlines, while small angles result in more linear outlines.



Outline attributes

2D 🖉 13	
Site & Landscape - Terrain	Þ
ID: OUTLINE	

In the View section users can define the graphic appearance of the elements, such as the pen used for the edge (in the new interface) and the hatching and fill background (in the old interface which can be reach by clicking the button on the bottom left of the dialog box).

In the next part of the dialog box, a pop-up menu allows select the layer where the fill will be stored and at the bottom, the Listing Attributes section allows to define an alphanumeric string to identify the outline.



Calculating Terrain

This tool enables users to start work on the terrain, modify the attributes of a terrain/ mesh calculated previously.

After the data describing the land morphology has been defined, it will have a series of 2D primitives (points/hotspots, constraints/lines, outline/fill) on the Archicad worksheet.

To calculate the terrain produced from this information click on the Terrain tool.

🔼 Terrain se	ettings ?	×
	ARCHITERRA	u/ ation
Plan attribute:	S	
$\langle \rangle$	U 53 Solid U 73 Show triangles	Þ
3D Model Att	tributes	
-	Grass - Brown 💥 🖾 🕨	
	Earth - Brown	
	◯ Show triangles	
Show Morpho	ology	
	33000	
+	22000	
+	11000	
	0	
	3D 💿 🗌	
	● Site & Landscape - Terrain	•
ID:	TERRAIN	
	Cancel OK	



In the Plan Attributes section, users can configure:

- The type of line used to represent the terrain/mesh.
- The pen used for the terrain/mesh outlines.
- The pen used for the terrain/mesh edges.
- The two bottom radio buttons enable the terrain/mesh triangulation on the map to be shown/hidden.

In the 3D Model Attributes section, users can configure:

- The material for the top surface of the terrain/mesh.
- The material for the side skirt and bottom surface of the terrain/mesh.
- The two radio buttons on the right enable the terrain/mesh triangulation on the map to be shown/hidden in the 3D view.

In the Show Morphology section, users can configure:

- The minimum altitude of the terrain and colour for representation.
- The maximum altitude of the terrain and colour for representation.
- The radio buttons on the bottom that enable the morphology be shown/hidden in the 3D view.

In the Listing Attributes section, users can configure:

- The layer where the generated terrain/mesh is stored.
- An identifying code for the generated terrain/mesh.

When the configuration is confirmed with the OK button, calculation of the terrain begins.



Show Morphology

Use this tool to highlight differences in terrain altitude in the 3D view using a colour gradient defined by the user.

The four series of controls below define up to four colours to be used (a minimum of two) for each altitude defined in the numerical field on the left. In the interval between each pair of altitudes, a colour gradient is used which changes from the colour of the lower altitude to reach the colour of the top altitude. The result in the photo-rendering view will be as follows:



As explained above, users can use up to four different colours (a minimum of two) according to the status of the two check-boxes on the far right of the two lines included between the maximum and minimum altitudes:





Contour lines tool

The Contour Lines tool allows to define the morphology of the terrain model by indicating the course of the contour lines or calculating and displaying the contour lines on preexisting terrain models.

Drawing contour lines

It normally needs to draw contour lines when the user start to collect and define data to build a terrain model from scratch.

A scanner is most used to digitalize the terrain map. Then, when the image is correctly imported and scaled in Archicad, the contours on the map are recopied and transformed into Architerra Plus information.

Drawing a contour line is extremely simple:

- 1. Draw a connected series of lines, arcs, polylines, and splines, then group them together.
- 2. Select the group of elements at the same altitude to transfer into contour lines.
- 3. Click on the Contour Lines icon in the Architerra Plus toolbox and the program will display the *Contour Lines settings dialog box*:





- 4. Configure the contour line parameters.
- 5. Confirm with the OK button.
- 6. Architerra Plus transforms the selected elements, assigning them the necessary information to build the terrain.

The options in the dialog box to transform the two-dimensional primitives into contour lines are:

Altitude: The altitude of the contour line from the project zero.

- *Pen for points:* The pen used to draw the points/hotspots deriving from transformation of the primitive into a contour line.
- *Pen for constraints:* The pen used to draw the constraints/lines deriving from transformation of the primitive into a contour line.
- *Line type:* The line type used to draw the constraints/lines deriving from transformation of the primitive into a contour line.
- *Layer:* Where the points/hotspots and constraints/lines making up the contour line are stored.

IMPORTANT:

The primitive 2D curves will be transformed into contour lines using the current resolution settings of the Archicad Magic Wand. This value should be appropriately configured to avoid generating excessively complex contour lines consisting of hundreds of thousands of nodes.



Calculating contour lines

The same tool in the Architerra Plus toolbox is also used to calculate contour lines on previously drawn terrain/mesh.

In contrast with ArchiTerra3 the nomenclature has been changed to follow the ISO norms. The principal counter lines have a suggested equidistance of 1m, and the Secondary counter lines have a proposed distance of 5m.

Contour line settings	? X
ARCHITERRA	eptar.hu/
	Editing 1 entities
Terrain min: -1 max: 33	
Primary Contour lines	
First altitude: -1000	ŝ
Final altitude: 33000	
Equidistance: 1000	
Solid	¥ 8
2D 💿 🗹 3D 💿 🗸	
Secondary Contour lines	
Step 5 €	y 54
Site & Landscape - Terrain	Þ
Car	ncel OK

Principal Contour Lines

First altitude: The altitude from which to start calculating the contour lines (the default value that appears is the lowest altitude on the selected terrain).

Final altitude: The altitude where calculation of the contour lines should end (the default value that appears is the highest altitude on the selected terrain).



Equidistance: The spacing between contour lines.

Secondary Contour Lines

When this option is activated (check-box with an eye icon), secondary contours are displayed every given number of secondary contours as defined in the Step field. The pen selection field allows to graphically distinguish these contours from the secondary contours (configured in the section below).

View



The two check-boxes enable or disable contour line display in the Map view and in the 3D view.

NOTE:

An operation performed with Architerra Plus that modifies the mesh morphology will automatically result in immediate updating of the Contour Lines object (if it has been calculated).




Colour Slops of Morphology

Architerra Plus collects the triangles which have the same inclination in the slope and use the same colours.

🔼 Slope analysi	s					? X
	AR CH	ITERF	RA			eptar.htt
						Creation
Slope intervals					Legend	
	5 10 15 20 25	< % <= [< % <= [< % <= [< % <= [< % <= [15 [1 20 [1	04 00 100 100 100 100 100 100 100 100 10	Abc M⊒t	
View						
2D 💿 [3D 💿 [\leq	- 1	0			● Site & Landscape - Terrain
						Cancel OK

In this way the user can see the morphology of the Terrain also in 2D.

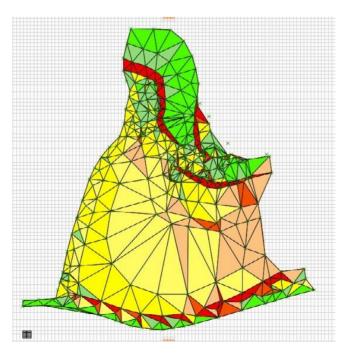



Exporting the data of a terrain to a text file

Once the procedure has been started by clicking on the icon, a standard save dialog box will open where the name of the file to export and the location can be defined.

Then the Settings dialog box will open with some options before finishing the export.

🔼 Settings	?	×
Destination:		
sample.txt		
Coordinates order		
() X - Y - Z		
() X - Y - Z Y - X - Z		
Exported information		
Export the terrain/mesh only		
C Export the terrain with the modifications performed		
Ca	ncel	ОК

The Coordinates Order section allows to define the order in which the X and Y coordinates will be exported.

The Exported Information section allows to choose what to export:

- Export Terrain/Mesh only (only the morphology of the original terrain is saved).
- Export Terrain with Modifications (points deriving from modifications to the terrain with elements are also saved).

NOTE:

If there is no terrain created, but exist only points, the data cannot be exported.



How Architerra Plus tools modify the terrain


Before describing the next tools in the Architerra Plus toolbox, here are a few simple examples of how Architerra Plus tools modify terrain.

Firstly, from this version of Architerra Plus, modifications to the terrain (plateau, roads, coloured areas and retaining walls) are performed using the Solid Elements Operations technique (Boolean operations).

The main advantage of this technique lies in the fact that all actions are parametric, in other words, the characteristics can be modified without losing the work carried out so far.

As all actions are now parametric, in the example given above, the level of the plateau, its shape or any associated parameter (such as the angle of the scarps or materials used) can be modified without problem.

The following image shows the profile of a terrain with a segment indicating the plateau we want to obtain:

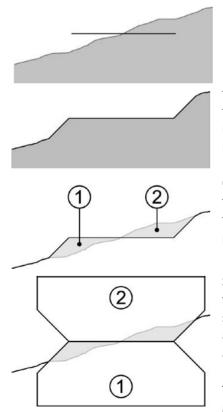

In practice, by modelling the terrain with Architerra Plus we want to obtain the following results:

If we analyze the operation with the help of the following diagram, it can be seen that part of the terrain (the part on the right labelled 2) has been removed, while the other part (on the left with number 1) has been filled.

Considering the terrain as a solid and thinking in terms of Boolean operations, the solution to model the terrain in such a way as to obtain the required plateau would be as follows.

Solid number 2 is the solid which "excavates" and which will therefore be used in the Boolean subtraction. Solid number 1 is the solid which "fills" and which will therefore be used in the Boolean addition.

The two Boolean operations of subtraction and addition (excavation and fill) give the required results:





Architerra Plus precisely uses this technique. As all Archicad users will know that the solids used as operators cannot be cancelled (otherwise the solid operation is lost) but must be positioned on an invisible layer.

Architerra Plus adopts the same logic, using a special layer named "AT_Operators" in which these two objects (the excavating object and the filling object) are stored, managed and suitably. A third object can be considered as the actual operation itself has a display and editing function only. In the case described above of a plateau, it simply displays the edge of the plateau and provides editable hotspots allowing users to drag the corners to modify the shape if required.

The three objects (excavation, fill and display) are intimately linked, and users do not need be concerned about which one are editing (although users in fact see and edit the display object only). When one is modified, Architerra Plus automatically modifies the other two as well.

When the user selects the operation (in fact selecting the display object) and modifies the configurations using the settings dialog box, Architerra Plus will automatically modify and update all three objects.

IMPORTANT:

Do not change the layer of the Architerra Plus objects used for terrain modelling or, if this is unavoidable, always use the Architerra Plus dialog boxes, selecting the action and then clicking on the icon of the relative tool in the Architerra Plus toolbox. Architerra Plus will be able to manage display automatically only if the original layer is used.


Polyline and Fill Tool

Architerra Plus uses often the *Polyline or the Fill Tool* as a base for further elaboration. In an earlier Version of Architerra Plus users had to use the commands from Archicad. To facilitate the use, we included those procedures directly in Architerra Plus and kept the use very similar.



Plateau tool

The fill used to identify the area to be levelled can include curved sides but not holes. If holes are present in the fill used, Architerra Plus will not consider them.

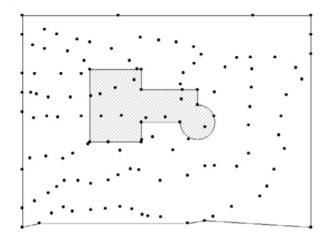

To create a plateau, first draw the perimeter of the area to be levelled using the fill tool and then select the fill to be processed.

Then click on the *Plateau setting dialog box* to start the procedure.

🔼 Plateau settir	ngs				?	×
AT AF	AR RCHITERF	RA				ar.hu/
Plateau		Floorplan				Creation
12	10000	0	Show fills and cut	s on floorplan		
sloping plat	5,00°		top pen top filltype cut fill pen fill fill pen cut- fill filltype	102 Foreground 20 1 100 100 100 100 100 100 100 100 100	d •	
Slope angles		2D/3D vie	w			
	60,00°		Paint - Celadon Paint - Cadmiu Paint - Cadmiu	m Orange	•	Ð
Slope extension						
	2000 2000	ID:	 Site & Landscape PLATEAU 	- Terrain		•
				Cancel	C	ж




In the section at the top left labelled Plateau, it can be defined as the height and type of the plateau, given that users can create either horizontal or sloped plateau. In this example the sloped plane option is disabled and a plateau with a horizontal plane will therefore be created. How to create a plateau with sloped planes will be described in detail in the following paragraph.

The angle of the scarps created by the excavation or filling can be defined in the following section, Slope Angles.

A value for the length of the scarp can be defined in the Slope extension section immediately below.

Here is an example.

The following image shows a rectangular plateau, with correct scarps and reach the level of the terrain:

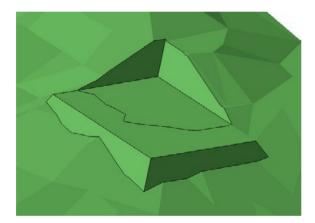

In a subsequent phase, the height of the plateau has been modified and raised appreciably. As can be seen from the following image, this graphic modification has left a block at the base where the original length of the scarp is no longer sufficient:





To avoid this problem, open the settings box by clicking on the icon of the relative tool in the Architerra Plus toolbox and increase the scarp length value appropriately:




Confirm the modification and the excavation will be update and will again be correct.

In the 3D Model section of the Plateau settings dialog box, it can be configured the resolution of the curved parts and the three materials used for the surface of the plateau, the surface of the excavated scarps and the surface of the filled scarps.




As a new feature that the slope angle of the plateau is possible to adjust separately on each side. When the plateau is selected, the purple hot spot appears on the slope side.

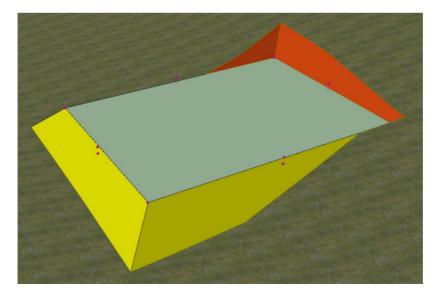




Click on this hot spot you can change the angle of slope graphically, or you can press the TAB button and write the required angle of slope, and hit the Enter.

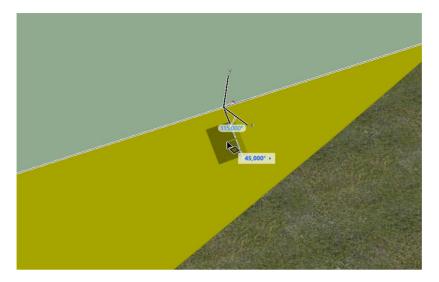

The slope will be modified immediately.

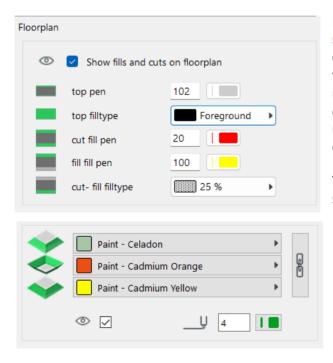


From version 5 the 2D and 3D View settings are separated, users can configure whether the perimeter of the excavation will be displayed in the map view (by activating the relative checkbox on the left) and the pens used to represent the edge of the excavation in the map and 3D views.

The ID field in the Listing Attributes section can be used to assign an identification string to the element in order to recognize it in the project lists to calculate the volumes of earth moved.




Sloped plateau

To create a sloped plateau, first draw the perimeter of the area to be levelled using the fill tool and then select the fill to be processed:

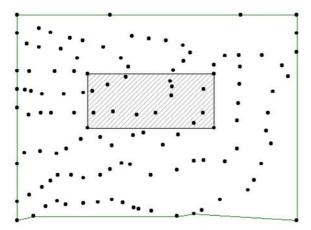


Then click on the Plateau tool to start the procedure. Architerra Plus immediately displays the *Plateau settings dialog box* described above.

To create a sloped plateau, click on the sloped plane check-box in the Plateau section.

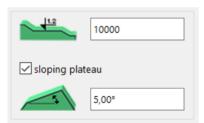

When the check-box is activated, the field below is enabled and it can be defined the slope of the plane. All other fields have the same function as described previously, configure as required and click on the OK button.

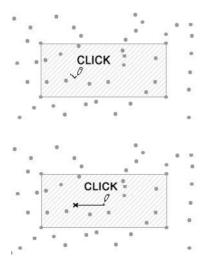


Architerra Plus closes the box and changes the shape of the cursor into a pencil, waiting for a click to define a node of the plateau.

After clicking, the user must click again to define the vector (which starts from the previous node and ends at the next point indicated by the click) determining the slope direction.




After this second click, the sloped plateau is generated immediately:

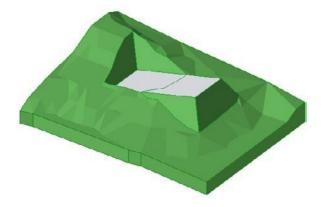


Modifying plateau

As already mentioned, these elements are parametric and can therefore be modified at any moment.

- 1. In the map view (or 3D view), select the element by clicking on one of the perimeter nodes.
- 2. Click on the nodes, drag them and release them in the required position as it would be to modify any Archicad polygonal element (slabs, fills, etc).
- 3. After modification, click on the Data Update tool to update the preview of the element in the map view.

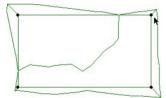

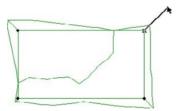

Selecting the element

Moving the nodes


Updating the preview in the map view



Road and Junction Tool

There are two ways to create a road: Using an Architerra Plus polyline or an Architerra Plus fill.

Creating a road using an Architerra Plus polyline

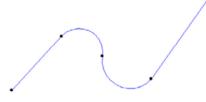


Using the Architerra Plus Polyline tool, draw a polyline to create the route line of the road to be created.

NOTE:

The nodes of the polyline are extremely important as they define the variations in altitude of the element. Architerra Plus uses these nodes to calculate the altitude of the element which will be rested on the ground with these coordinates.


In this version the placed route line will have a new function. In this enhanced Road tool, the route line and the road will have an associative relationship. It means, if the Route line is moved, the road will follow it, if a new node is created on the Route line, the new node will be created on the edges of road. All edit functions, what is possible to apply in case of polyline, will be true for the road modification.

These are:

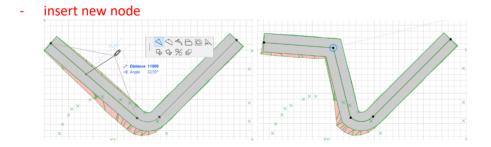





- fillet and chamfer

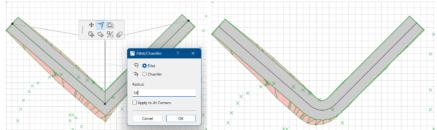

- curve the straight segment

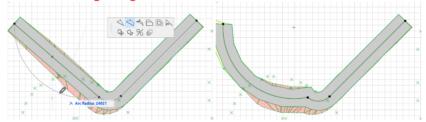


- offset edge, or all segments

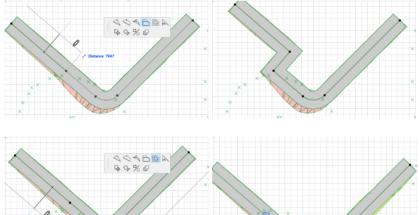

- stretch the length or move nodes



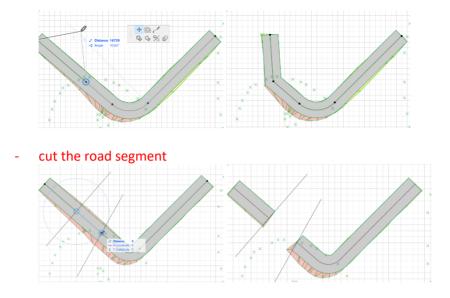

Select the polyline and click on the Road tool in the Architerra Plus toolbox to display the *Road settings dialog box.*

Road settings	RA			?	×
				-	reatio
Highway	Floorplan				
6000	٢	Show fills and cut	ts on floorplan		
•		road pen	102		
	-	road filltype	Foreground	•	
6		cut fill pen	20		
Slope angles		fill fill pen	100		
	0,00°	cut- fill filltype	25 %	Þ	
45,00° 45	5,00° 2D/3D vie	ew			
Slope extension		Paint - Light	Gray	•	
++		🕨 📕 Paint - Cadm	nium Orange	•	9
2000	-	Paint - Cadm	nium Yellow	•	
2000		 Site & Landscape 	e - Terrain		Þ
	ID:	ROAD			
			Cancel		ОК

The first value in the Road section indicates the width of the carriageway. Use a polyline to create "regular" roads with a constant width (although by dragging the edge nodes, it



can easily modify the shape afterwards). Below in this section, the user can configure the resolution of the curved parts.



Immediately below in the Slope Angles section, four fields allow to define the angle of the excavated and filled scarps on the right and left of the road.

sx:	60,00°	25	60,00°
	45,00°	-52	45,00°

Below this, in the Slope extension section, it can be defined as a value for the length of the scarps. These two values follow the same logic and have the function as described previously for the Plateau tool.

A new parameter section is "Floorplan", where the user can set parameters of the road cover fill, and parameters of slopes. These settings are for 2D representation of the slopes.



In the 3D view section, the three materials used for the surface of the road and the surface of the excavated and filled scarps (the chain on the right enables the same material to be assigned to the three surfaces).

In the 3D View section, it can be configured whether the perimeter of the road will be displayed in the map and the surface material used to represent the slope of the road in 3D views.



2D/3D view			
	Paint - Light Gray	Þ	Q
	Paint - Cadmium Yellow	•	

The ID field in the Listing Attributes section can be used to assign an identification string to the element to recognize it in the project lists to calculate the volumes of the earth moved. Lastly, the pop-up menu at the bottom right allows to define the layer where the element object is stored.

Ø	Site & Landscape - Terrain	Þ
ID:	ROAD	

Confirm the modifications made to the settings using the OK button and Architerra Plus will immediately process the road as requested.

After the road is placed there are some NEW settings available in the Road objects settings window. Select the Road object, open an Object Settings window. **New settings for Road:**


Object Selection Settings		? X
□ ☆ Q. Search Library Parts ③	AT_ROAD	Selected: 1 Editable: 1
Embedded Library	► DI PREVIEW AND POSITIONING	
> 💼 Loaded Libraries	▼ KOAD SETTINGS	
> 🛅 Built-in Libraries	4 🕨 General Settings	Þ
	Use the new algorithm	Road Profile
	2000	Complex Profile
		MISSING
	2000	Thickness 20
	Nodes Levels: right = left	Building Material
	permanent chang Editing mode (faster)	Concrete >
	SIMPLIFY CUT SEO SIMPLIFY FILL SEO	Section Pen
		AT_ROAD
	FLOOR PLAN AND SECTION	
	> 🗇 MODEL	
	CLASSIFICATION AND PROPERTIE	s
AT ROAD AT ROAD JUNCTION	and the second s	
₽ •	Site & Landscape - Terrain	Cancel OK

- Road composite

The composite, what could be used for road, is not predefined in Archicad, so it must be created in the Profile Manager by user.



How to set road composite?

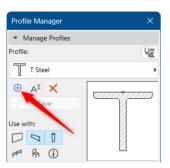


Open the profile manager, click on "+" sign. Give the name for this profile and save it into the existing or new folder in the profiles list.

	Profile Manager	×
	* Manage Phoffes	
	Profile	V2
	Read_profile_01	
, Norriral Wolfs. (027)		10000
	P ^{el} R ()	
	Capture Apply	
	Design Layers Original Conduction	1
	Conduction Disting	
	(b) 11 Stretch Modifiers	
	The second seco	
	Offset Modites Opering Relevance	
	Moders	
	Name	
	Width Stretch	1
	I Height Stretch	
	≝ ×	
	Conservation - Default	
	Uniform Profile Contours	

The next is to create the composite for road. Select the FILL tool and draw the rectangular. The upper point should be defined in the Origin. If the upper point defined higher, the road surface, where this composite will applied, will be elevated from the original level.

So draw the first layer with the FILL tool. Then define under this some other according to the requirement. After it select the placed fills step by step and define the Building Material for each. When it is done, select

the element group, where this composite can be used for. In our case it is only the "Object" group.

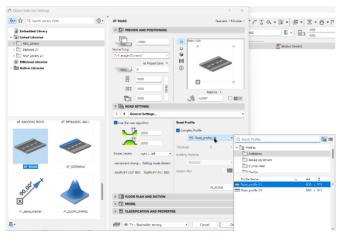

Now click on the Save button on the Profile Manager palette. The necessary composite is created and can be applied for Road.

Now select the road and open the settings window. Turn on the Complex profile checkbox and select the composite from the list. Click on OK, and it will immediately applied on the selected road.

If you make a Section through the road, you can see that the road has already the composite structure.




Some earlier settings are moved from first TAB to the next one, like:

- Shoulder for both sides of the road with size and material
- Road line
- Curb on the side

In this settings window it is possible to switch on/off the visualization of road line, set the colour of it. Also, it is possible to switch on/off the curb on all sides, set the size, shape and the material of it.

Object Selection Settings	? ×
R→ ☆ Q. Search Library Parts @	AT_ROAD Selected: 1 Editable: 1
Embedded Library	* 21 PREVIEW AND POSITIONING
V 🟦 Linked Libraries	
> 🛅 ASU_Library	-1000 - 1000 × ×
> D Bibliotek 27	Home Story:
> The MEP Library 27	2. 1. etasje (Current)
BIMcloud Libraries	to Project Zero 🕨 🔲
> 🛅 Built-in Libraries	
	× 1000
	⊠‡ 1000 0 Relative ▶
	1 1000 🔊 0.000° 🗆 🛛 🖾
	Accessories
	Curb
	Curb on Side 1 Curb on Side 2 Shoulder on Side 1 1000
	Curb on Start Curb on End Shoulder on Side 2 1000
	Shape Type Rectangular V Surface Utomhus - Gre •
	Width 150 Complex Profile
AT ROAD AT SIDEWALK	100
	Curve Radius 50
× O	Surface Maling - 04
30 ⁰⁰ ×	Building Material
00,0	Road Line Grus
	Surface Maling - 01 > Section Pen
	FLOOR PLAN AND SECTION
AT_slope_marker AT_SLOPE_RANGE	> 🗇 MODEL
	CLASSIFICATION AND PROPERTIES
* •	T1 Bearbeidet terreng Cancel OK

The road line and the curb are visible in 2D and 3D.

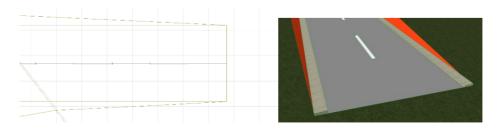




Creating a road using an Archicad fill as described above, by using a polyline the user will obtain a "regular" shaped road only (although by dragging the editable nodes subsequently, it can modify the morphology).

Creating a road using an Architerra Plus fill

Sometimes is required to create more complex shapes, not necessarily "symmetric" on the two sides. In this case, users can use an Archicad fill to define the shape of the element more freely. Using the Archicad Fill tool, draw a polyline to represent the edge of the road:

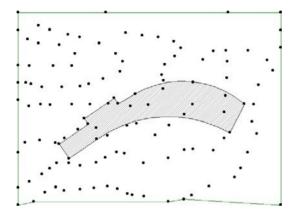


NOTE:

The nodes of the polyline are extremely important as they define the variations in altitude of the element. Architerra Plus uses these nodes to calculate the altitude of the element which will be placed on the ground with those coordinates (from the side selected as the reference side).

Select the fill and click on the Road tool in the Architerra Plus toolbox to display the *Road* settings dialog box (where the road width field will be disabled). From this point, the procedure is the same as described in the previous topic.

Configure the settings as required and confirm by closing the dialog box by clicking OK. Architerra Plus closes the dialog box and the cursor changes shape, waiting for the user to make two clicks to define information fundamental to creating the element. The first two clicks must be performed on the two sides which identify the two ends of the road.




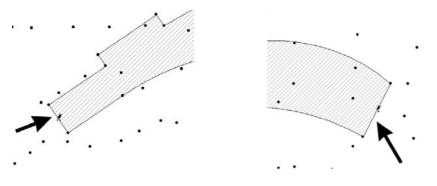


Click to define the starting side


Click to define the end side

After the second click, the operation is calculated and displayed on the terrain:

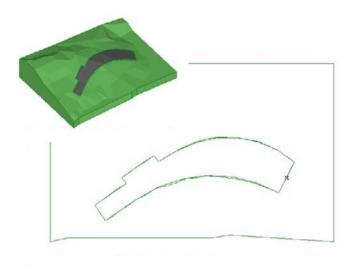

New functions presented above are also working in case of this type of Road.

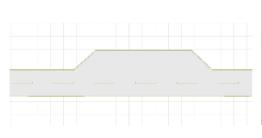

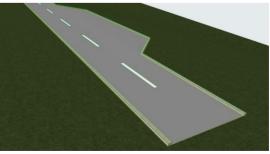




Modifying roads

As already mentioned, these operations are parametric and can therefore be modified at any moment.

- 1. In the map view (or the 3D view) by clicking on one of the perimeter nodes.
- 2. Click on the nodes, drag them, and release them in the required position as it would be to modify any Archicad polygonal element (slabs, fills, etc).
- 3. After modification, click on the *Data Update tool* to update the preview of the element in the map view.



Selecting the operation

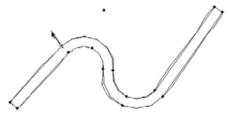

Moving the nodes



Updating the preview in the map view

The element parameters can be modified in exactly the same way as any Archicad library element:

- 1. In the map view (or the 3D view) by clicking on one of the perimeter nodes.
- 2. Click on the icon of the relative tool in the Architerra Plus toolbox to display the settings dialog box.
- 3. Carry out the necessary modifications.
- 4. Confirm the modifications by closing the dialog box with the OK button.



As seen in the previous topics, each node on the side of the road can be dragged into the required position. In addition, the road itself can assume any shape and therefore by dragging and positioning the nodes it can obtain any type of road junction.


Creating road junctions

From this version the new Road junction tool is available. Whit this tool the user can place junction element with quite a lot of parameters, and possibilities to modify it. There are two ways to place the junction:

- 1. on the intersection point of two roads
- 2. selecting a 3D point


The first option: in the intersection point of two roads

When two roads intersect each other, the intersection point appears. Select two route lines of placed two roads and click on Junction tool icon. The new palette appears:

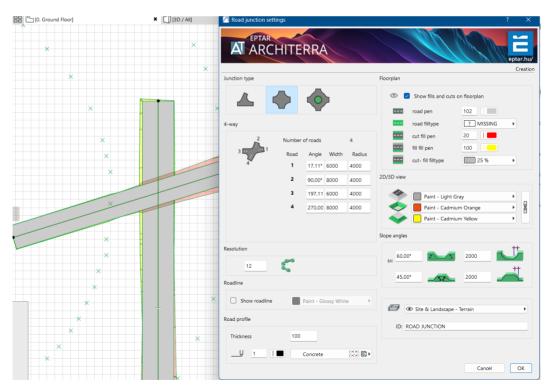




The add-on automatically reads the number of roads and will choose the junction with the correct number of exits. The height where the junction element will be placed is the highest intersection point of junction and roads.

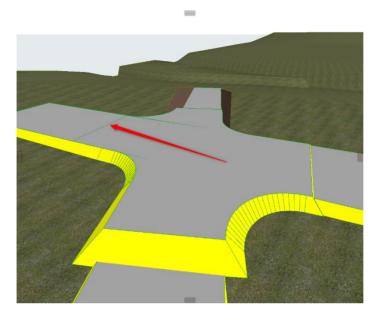


On other exits the height of roads should be adjusted manually. Of course, the level of junction can be changed after it's placed. The add-on will place the junction with the correct road width also: if the width of two roads are different, the width of exits will be adjusted to the road correctly.

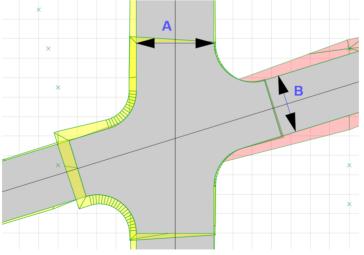


The junction has many hot spots in a floorplan and in 3D view.




With these hot spots the user can adjust the width of the exits:

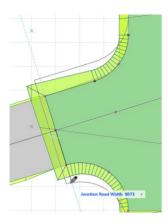

...make it longer:

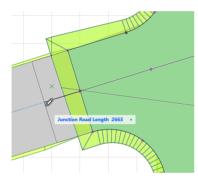


... select the curves radius:

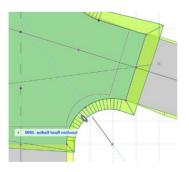



... or change the angle:

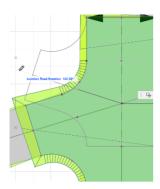

With this final operation, the order of the exits can be rearranged, if it is necessary.


The add-on will place automatically the junction with the correct number of exits.

Second method to place a junction: using a 3D point

For this the user can use any predefined point of the terrain or create a new one with the Point tool of Architerra.




Open the settings window of this tool the user can define the height of the point, the click on OK. With the cursor click on the floorplan the new point appears. Selecting this point click on Junction tool. The junction settings window appears, and from this step the whole operation is the same as in the previous paragraph.

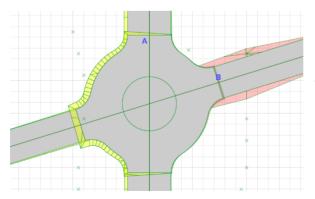

There is one more option, it's a roundabout. It was almost impossible to do earlier, but now with the junction tool it is easy. The placement process is the same as in case of simple road junction, only the different type should be set in the settings window.



The roundabout element has many hot spots in 2D and 3D, so the manual adjustment is easy.

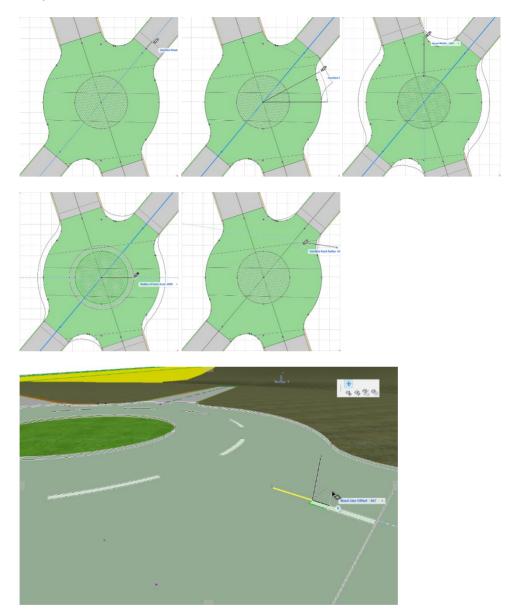


The road profile can be applied in case of junctions, so the composite structure will be visible in section view as well.




When the user turns on the road line, it appears in 2D and 3D view. In the road junction it can show the main traffic direction. Some of the road line parts have a hot spot for manual modification.

Creating a junction with additional nodes

Imagine a situation in which the user wants to create the following junction on a terrain:

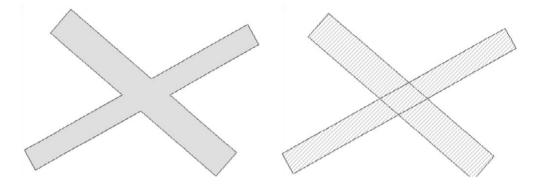

Draw two fills to represent the roads and in each of the two fills, add four nodes at the junction with the other fill/road:

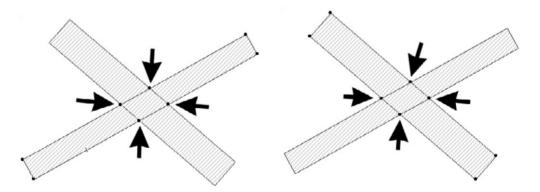

At the junction, each of the two roads will now have editable nodes that can be used to adjust their shape.

Now, following the usual procedure, the two roads can be generated.

1. Select the fill representing the first road and click on the Road tool.




- 2. Configure the parameters in the *Road settings dialog box* and confirm the modifications with the OK button.
- 3. Now, in the map view, make the two clicks required to define the start side and end side of the road Architerra Plus will now generate the first road.

Before going on to create the second road, configure the altitudes of the perimeter nodes of the road just created to achieve the required result.

This operation MUST be performed before generating the second road. In this way, the nodes on the junction will already be at the correct altitudes and the second road corresponding to the junction will already be configured correctly. Repeat the above procedure with the second road. Creating a junction with a road/junction.

We believe that the junction creation procedure suggested in the following example is simpler, more flexible, and more immediate than many other methods, although the method described above enables you to manage the angles of the side slopes of the roads at the junction precisely and is therefore preferable.

The following image shows a terrain/mesh and two roads which cross at the centre:

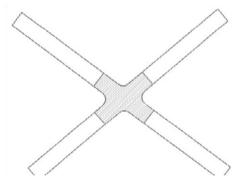

The junction, represented by a fill with 45° hatching, also contains curved parts. As explained in previous paragraphs, there are in fact no limitations to the shape.


The four roads have also been represented using fills.

We will now process these roads.

- 1. Select the road at the bottom left together with the terrain/mesh and click on the Road tool.
- 2. Configure the settings dialog box and confirm the modifications by clicking on the OK button, then make the two clicks required as described in the previous paragraph.


Repeat the same procedure with the other three roads. The result will be similar to the following:



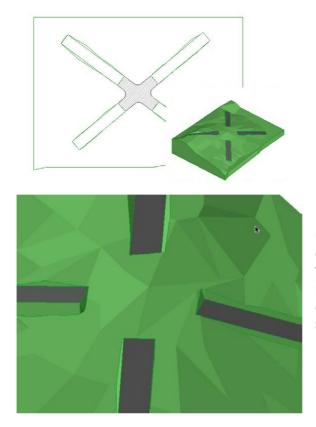


Before created a junction, make all the necessary modifications to the altitudes of the road levels until obtain the desired situation (thus avoiding the need to manually reconfigure the altitudes of the junction nodes during subsequent phases).

Now select the fill which represents the junction and repeat the same procedure, in other words, the junction is considered as if it were a road.

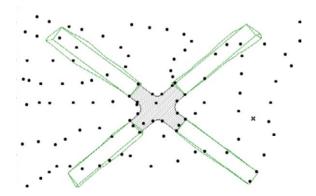


Click on two sides to define the ends of the road/junction:



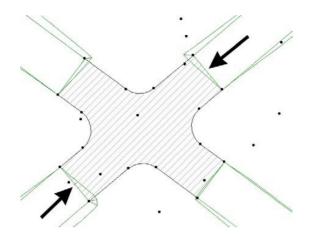

And Architerra Plus immediately calculates the road/junction:

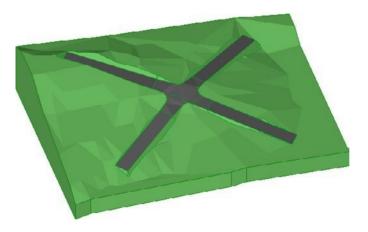



Road longitudinal section tool

As will be described below, the nodes of the road can either be dragged along the X-Y plane or along the Z-axis and the levels of the road can therefore be modified graphically without having to use Longitudinal Sections.

This procedure may be, however, still useful as it is an excellent tool for documenting the longitudinal section of the road.

IMPORTANT:

Looking forward for a future version which will also include cross-sections, we suggest to use only one longitudinal section. As far as in most cases the cross-section are horizontal, it should not be a problem. Where still two longitudinal sections are requested, we suggest using the older dialog.


To create a longitudinal section of the road follow the steps below:

1. In the map view, select the road whose longitudinal section is preferable to see and click on the Longitudinal Section tool in the Architerra Plus toolbox. Architerra Plus immediately displays the tool settings dialog box:

Cross section settings	?	×
AT ARCHITERRA	ept	ar.hu/
Graphic definition		Derault
0 7 1 0 7 1 0 7 1 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0		
Show road plan Show right cross section Show right cross section Crotate left cross section Site & Landscape - Terrain Cancel		ОК




- 2. Configure the settings as required (they will be explained in more detail below) and confirm by clicking OK.
- 3. Architerra Plus has already selected and appropriately configured the AT3_ROAD object. By clicking in the map view or, preferably, open and click in the Section/ Elevation view it can be defined the insertion point for the longitudinal section object and the section which will be inserted in the worksheet as requested:

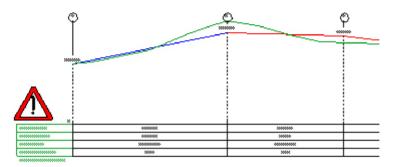

Data requires updating

This object is intimately linked to the Road object on the map. All modifications (mainly to the altitudes) can be automatically transferred to the original Road object by selecting the modified section object and clicking on the Data Update tool icon.

Whenever the section object is modified, remember to update at the end of the procedure using the Data Update tool (which transfers the modifications to the road on your terrain). It will be seen a warning icon which will disappear as soon as the update has been performed:

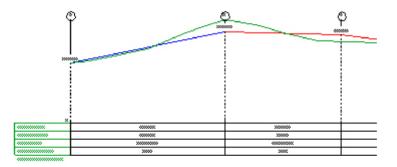

Data already updated



Configuring Longitudinal Section Settings

Cross section settings	?	×
ARCHITERRA	ept	tar.hu/ Default
Graphic definition		
0 7 0 20 0 4 0 Dashed 63 0 63 0 Solid Abc Arial Nyugati M 1 2,00 mm 1 1		
Show road plan Show right cross section Show right cross section Totate left cross section Totate right cross section Totate right cross section Totate right cross section		
Cancel		ОК

The numerical field at the top left enables to set the reference altitudes (within the limits of the interval available). The user can use this field, for example, to align the various longitudinal sections and make them congruent.

6


Pen for straight sections of the road.



Pen for curved sections of the road.



Pen for the terrain profile.

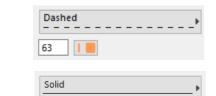

🗧 epta

Line type and pen for vertical reference lines.

Line type and pen for table grid lines.

Abc	Arial Nyugati 🗸 🗸				
Miit	2,00	mm	Ų	1	

Font, character size and pen for text.

Check-box to show/hide the plan of the road. It may be useful to display the plan when the longitudinal section has been inserted in an

Archicad Section/Elevation view. The plan may be a useful reference when making modifications.

Show left cross section	Show right cross section
♀ □ rotate left cross section	rotate right cross section


This check-box allows to reverse the direction of the profile. The original direction of the two profiles derives

from the direction of the road itself (calculated from the 2D elements - polylines or fills - used to generate it).

These controls allow users to manage the orientation of the road as you wish. Finally, the last pop-up menu allows users to choose the layer for the longitudinal section.

Modifying road levels using the longitudinal section

When the user select the longitudinal section, it will be able to see that each node of the road profile corresponds to an editable hotspot:

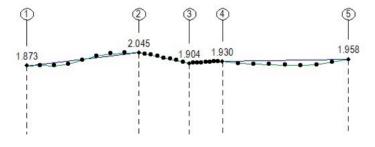


IMPORTANT:

The editable hotspots (displayed by Archicad as small diamonds and in a different colour according to the settings and version of Archicad you are using) correspond to numbered dots at each node along the side of your road.




The other hotspots (simple dots) are merely reference points indicating the original profile of the terrain (and therefore its altitude) along the side of the road.


It is extremely simple to modify the levels of the side of the road, (obviously dragging is automatically constrained to a vertical direction):

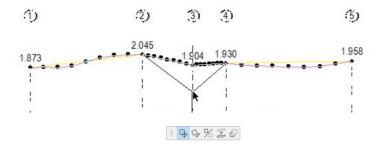

Dragging the node

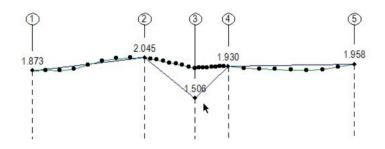


Node dragged into a new position

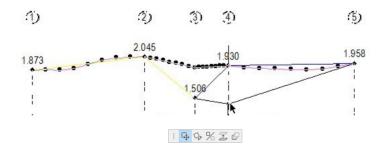

Dragging the node



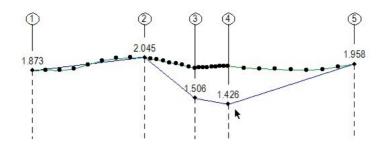

Node dragged into a new position

After modifications, the original road can be updated by clicking on the Data Update icon.

NOTE:

If you are working in Section/Elevation view, the Architerra Plus toolbox will automatically be configured to show only the functions available in this view (namely, the Longitudinal Section tool which enables you to modify the parameters of the elements and the Data Update tool to update the original road).

Railway and Railway crossing

There are two ways to create a road: Using an Architerra Plus polyline or an Architerra Plus fill.

Creating a railway using an Architerra Plus polyline



Using the Architerra Plus Polyline tool, draw a polyline to create the centre line of the railway to be created.

NOTE:


The nodes of the polyline are extremely important as they define the variations in altitude of the element. Architerra Plus uses these nodes to calculate the altitude of the element which will be rested on the ground with these coordinates.




Select the polyline and click on the Railway tool in the Architerra Plus toolbox to display the *Railway settings dialog box*.

🔼 Railway settings		?	×
AT ARCHITER	RA	eptar	t.hu/
Railway	2D/3D view	C	reation
6000 600	1435 Metal - Steel Paint - Light Gray Paint - Dark Gray Grass - Green Grass - Green © V	→ → ◇◇◇ ◎ → ◇◇◇ ◎ →	Q
	60,00° 45,00°	💸 □	
Slope extension	Site & Landscape - Terrain ID: RAILWAY		•
2000	Ca	incel	ОК

The first value in the Railway section indicates the width of the railway. Use a polyline to create Railway with a constant width.

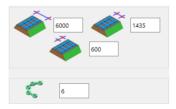

Immediately below in the Slope Angles section, four fields allows to define the angle of the excavated and filled scarps on the right and left of the railway.

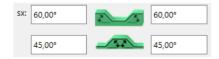



Below this, in the Slope extension section, it can be defined a value for the length of the scarps. These two values follow the same logic and have the function as described previously for the Plateau tool.

At the top right in the 3D Model section, the user can configure the resolution of the curved parts and the three materials used for the surface of the road and the surface of the excavated and filled scarps (the chain on the right enables the same material to be assigned to the three surfaces).

◎ ✓	Ų	4	
-----	---	---	--

In the 2D/3D View section, it can be configured whether the perimeter of the railway will be displayed in the map view (by activating the

relative check-box on the left) and the pens used to represent the edge of the railway in the map and 3D views.

If the railway crosses the road, the special object helps to create the correct railway crossing. For first step you need to place 2 (two) railways (on both side of the road), set the required height of the railway ends. After it draw the polyline between two railways and select it, then click on Railway Tool. In the settings window set the checkbox for



railway crossing and click on OK button. The program will place the necessary railway crossing element. After it the railway ends can be adjusted to it's high.


The ID field in the Listing Attributes section can be used to assign an identification string to the element in order to recognize it in the project lists to calculate the volumes of earth moved. Lastly, the pop-up menu at the bottom right allows to define the layer where the element object is stored.

	Site & Landscape - Terrain	Þ
ID:	RAILWAY	

Confirm the modifications made to the settings using the OK button and Architerra Plus will immediately process the railway as requested.

After the railway is placed there are some setting available in the Railway objects settings window. Select the Railway object, and open an Object Settings window.



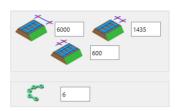


If the main parameters should be changed, select the railway object and open the ArchiTerra Railway settings window, the set necessary values.

Ditch tool

The ditch is a quite important part of the terrain project. The is working with similar method as all other Architerra tools: place the track line and generate the element. In case of ditch there are two different ways to create it depending on its location, position.

The dich next to road:

- place the track line on the edge of road element with polyline tool, then select it with the road together.

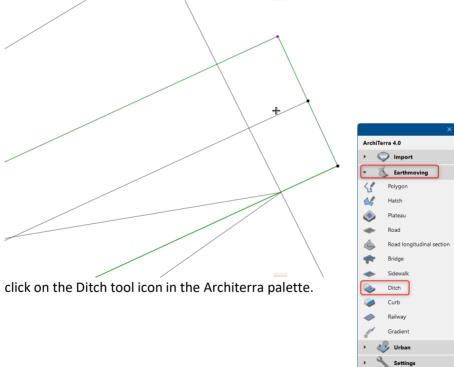



P

? Help

_____ z √___ □

Data update


Show coordinates

the settings window appears, and there are many parameters: first is the position of the ditch. If the "Attached to the road" is set, the add-on will adjust ditch's points to the road edge and to the road height. There is a "Road distance" parameter, which is a distance between road edge and ditch edge, if necessary. On the right we can select the ditch type: simple ditch, when there is only a ditch dug, and the second is with lining. Below there is a slope parameter, the size of the ditch, and the "Profile from Profile Manager", where we can create a really special profile for ditch.

Ditch settings	? ×
ARCHITERRA	Creation
Attached to the road User defined path	Ditch
Road distance	Simple ditch
	With lining = 50
Ditch geometry	2D/3D view
Simple geometry 3000 60,000° 60,000° 60,000°	Stein - Marmor hvit Image: A state of the state of th
	6
O Profile from Profile Manager	T1 Bearbeidet terreng
Custom	ОЛСН
	Cancel


- Clicking on OK, the add-on places the ditch next to the road as well. The ditch is selectable, and we can modify its point to the right or necessary position.



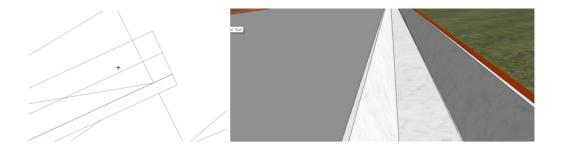

The standalone ditch on independent track line:

- place the track line to the necessary position and select it.
- open the settings windows and it's already visible, that in this case there is no option allowed, the "User define path" is selected, and the setting is inactive.
- all other parameters and profile settings are active and possible to set.
- click on OK the ditch is placed.

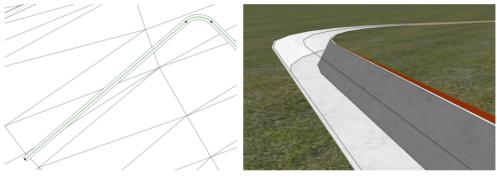

Custom profile for ditch:




- in the settings window there is an option to use custom profile, which we create with Profile Manager.
- first open the Profile Manager and create the custom profile for Objects

Options Teamwork Window	EPTAR Solutions Norkart Help	Profile Manager ×		
Element Attributes		▼ Manage Profiles		
Noperty Manager	Layer: Geo	Profile:	Profile:	Ų∝
Glassification Manager		Custom	2	122
Complex Profiles	Profile Manager	Q AI ×	Ditch 01	•
🚛 Load Manager	Capture Profile of Selection	New Edit	🕀 AI 🗙	
Load Combinations	🚵 Edit Selected Composite/Profile	Use with:	Save	
🎝 Load Mapping	Import Standard Steel Profile	FR O	Use with:	
↓ Eload Categories		Element Selection:		
He Auto Intersection		Capture Apply		
Add-On Manager		▶ Design Layers		
Project Preferences	. ///	Modifiers Components - Default	Element Selection:	
Work Environment		Components * Derauit Uniform Profile Contours	Capture	Apply

- place the track line (path), select it and open the settings window
- on the bottom side of the window there is an option to select "Profile from Profile Manager" checkbox. Selecting it the profile list created with Profile Manager is available and it's possible to choose the required one.

Profile from Profile Manager	71 Bearbeidet terreng	1
Custom	✓ Custom CW Cap 80/20 CW Corner Cap 80/20 CW Corner Frame 80/160	ጭ ጭ ጭ
	CW Corner Frame Butt-glazed 80/160 CW Frame 80/160 CW Frame Butt-glazed 80/160 CW Window Frame 48/48	፝ ቚቚቚ ቚ
	Ditch 01 Gesims flatt tak HEB180 Hulldekke SD200 Hulldekke SD265 I-Riellee T	

- Select it and click on OK, and the ditch is placed with the selected custom profile.

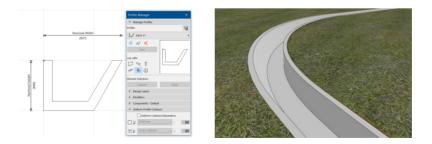




Curb tool

Up until now in Architerra Plus this function was available in the Road element, and it was directly connected to it. This is still available in the Road object, but to create a correct curb at the necessary place, we implemented a standalone tool for it. The advantage of this tool that we can define a curb at any place with the length what is not depending on the predefined road length. Second advantage, that there is possibility to use custom profile for it, which profile is possible to do with "Profile Manager" of Archicad.

Creating a standard curb:

- draw the path with the polyline on the edge of placed road, select the road and this path, and open the Curb Settings window

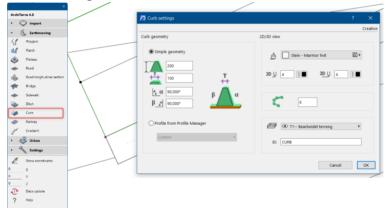


- in the settings window – if we select the "Simple geometry" option - we can configure the size of the curb profile, then click on OK. When the window disappeared, in the end of the path line the small "Arrow" indicates, on which side the curb should be placed.




- click on right side and the curb is placed.



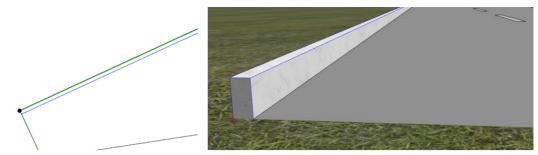


Creating a custom profile curb:

- draw the path with the polyline on the edge of placed road, select the road and this path, and open the Curb Settings window.
- select the "Profile from Profile Manager" option, and choose a custom profile from the list of Profile Manager

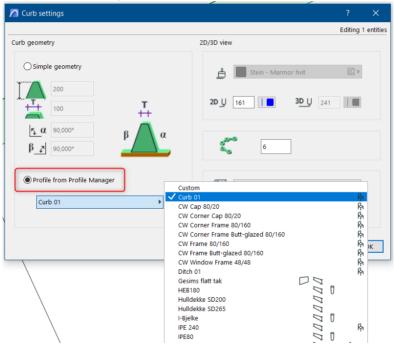

- click on OK, and the selected custom profile is applied.



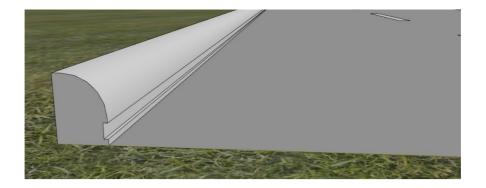

Bridge / Railway Bridge tool

Up until now in Architerra Plus 1.5 this function was available only for Road Bridge. Now as a new option the user can define and create Railway Bridge also. It is possible to place using the similar method and settings window as in case of Road Bridge.

This tool can place a strait Bridge element ONLY, the polyline and curved construction is still not available.

For first step you need to place 2 (two) roads (on both side of the river or valley), set the required height of the road ends. After it draw the polyline between two roads and select it, then click on Bridge Tool. In the settings window you can find an already standard settings of Architerra Plus elements (size, border, 2D/3D representation, etc) and the Raily Bridge settings are also here. In Railway settings part the user can set 1way, 2ways rails and set the global parameters of it:





After setting of required parameters click on OK and the program will place a bridge element on the predefined line between two road ends on the level of roads. After the bridge is placed, you can set many other parameters and functions in the Archicad Object Settings window. Select the bridge element and open a setting window:


Object Selection Settings	? ×
序・ ☆ Q [4	AT_BRIDGE Selected: 1 Editable: 1
Embedded Library	- DI PREVIEW AND POSITIONING
✓ Imit Linked Libraries	
> Archicad Library 26	0 1000 x 1000
> ASU_Library	Home Story:
> MEP Library 26	0. Ground Floor (Current)
BIMcloud Libraries	to Project Zero 🕨 🗐
> 🎦 Built-in Libraries	
	Relative ▶ ▲ 0.00* □ ☑ 🗵
	ARCHITERRA BRIDGE SETTINGS
	↓ ↓ ↓ ↓
	Use Custom Profile Road Line
	Select Profile
AT_BASIN AT_BRIDGE	MISSING Sizes 1435 900
	Sidewalk on Side 1 Road Pavement Sidewalk on Side 2
	Rectangular V Rectangular V
	500 F 100 F 6000 F 0 500 F
AT_BUILDING AT_CONTOURLINES	50 50 50
	200 7 000
	FLOOR PLAN AND SECTION
	> Model
	B CLASSIFICATION AND PROPERTIES
血,	Cancel OK

On the first tab you can switch on/off the road line and set the custom profile for the bridge deck, even for Railway bridge. The default profile is a simple slab, no in this case you can define the sidewalk on both side and the pavement.


Custom profile: to create a custom profile you should use a default Archicad Profile Editor. Open an Archicad menu-Options-Complex Profiles-Profile Manager and create any profile, any shape what you would like to use for Bridge. Please note, you should define the deck, the sidewalk, and the pavement of the bridge. Do not forget to apply this profile for Archicad Object!

In case of custom profile, the sidewalk and the pavement should be defined in Profile Editor of Archicad.



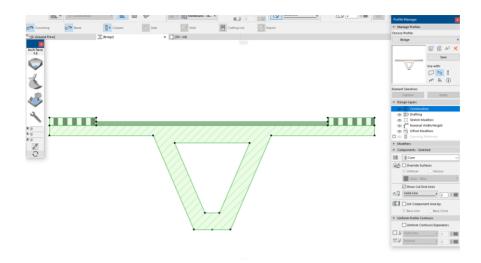


Saving this profile, you will able to use it in case of Bridge:

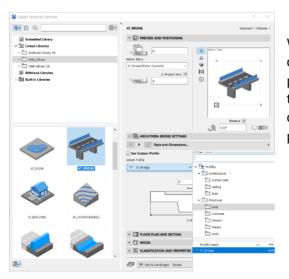

When you select a Custom profile the width of the bridge, the sidewalk and the pavement will the size what you defined in the Profile Manager. If you would like to change these sizes, you should edit the profile in the Profile Manager and save it.



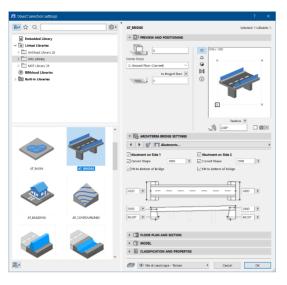


On the next TAB of the Bridge settings window, you are able to switch the Abutment on both ends of the Bridge. The size, the shape of the abutment (curved or rectangular), and the Inclined Angle of it can be set. You can also decide how the abutment connected to the deck of the bridge: fit to bottom of bridge or not.

Diject Selection Settings	7 × 1
<u>β</u> , ζ Q	AT_BRIDGE Selected 1 Editable: 1
Embedded Library	→ □ PREVIEW AND POSITIONING
	0 1000 x 1000
> Atu Library	Nome Stary:
> Em MEP Library 26	0. Ground Floor (Current)
BIMcloud Libraries	to Projett Zero 💌 🔲
> The Bull In Libertus	
A	Relative >
	→ N ARCHITERRA BRIDGE SETTINGS
(C.C)	
	Ver Shape Size
AT BASIN AT ENDOL	Fier Shape Type Rodangular V 1000 R
	Vitt to Bottom of Bridge
🧼 🧔	<u>s ù ù Û </u>
AT_BUILDING AT_CONTOURUNES	There are Editable Hotspots on Bridge Jois for Distances of Piers from Side 1
🧼 💊	
<u>n</u> .,	O Site & Landscape - Terrain Cancel OK

On the 3rd tab of the Bridge settings window, you can apply Piers, if the Bridge is too long. The size, the shape of the Pier (Rectangular, Curved rectangular, Oblong, and Circular), and the amount of them can be set. You can also decide how the pier connected to the deck of the bridge: fit to bottom of bridge or not.



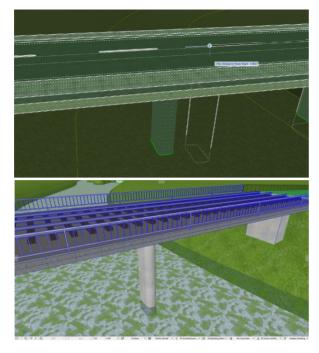

The position of the Piers is modifiable graphically with hotspots in 2D and 3D.

Be back takeny Be back takeny Be back takeny	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
••••••••••••••••••••••••••••••••••••	
A Device of the second	
Buttone Linearies Buttone Lin	
B Ball is Liberies Image: Control of	
Image: Section of the section of t	
Image: Second	Relative B
Image: Second	A
AT JACK	
AT JACK	,
Radio Brazel	Railing on Side 2
	Number of Posts 3
	Number of Rods 3
AT_BUILDING AT_CONTOURLINES	
PLOOR PLAN AND SECTION	
> D MODEL	

On the 4th tab of the Bridge settings the Railing can be set on both sides with size, position parameters. You can set the number of Posts and Rods separately, set the size of them.



	¢	> AT_BRIDG				Selected: 1 Editable
Embedded Library		- Et s	REVIEW AND POSITIONING			
E Linked Libraries		1580				
> C Archicad Library 26				0 1000 ×	1000	
> C ASU Library		Home Stor	Y.			
> C MEP Library 26		0. Ground	/ I floor (Current)	ା ଢା '		î.
(II) BIMcloud Libraries			to Project Zero			
Built in Libraries				0	3	×
		^ ● 1864	RCHITERRA BRIDGE SETTING		Relati	
~~~~		• •	2D REPRESENTATION	and Materials		
			Contour Pen	9.12 mm	1	
-			Fil Type	25.9		100000000
AT_BASIN	AT_BRIDGE		Fill Pen	0.15 mm	2	
			Fill Background Pen	0.13 mm	91	
			3D REPRESENTATION			
			Contour Pon	0.35 mm	6	
		•	MATERIAL AND SURFACES			
		5	Bridge	Concrete - Structu		168
	-	8	Road Pavement	Concrete Block - S	tructural	225
AT_BUILDING	AT_CONTOURLINES		Sidewalk	Concrete		199
		0	Abutment	Concrete		1.11
	÷	٥	Pier	Concrete		1.13
		• 🖾 •	LOOR PLAN AND SECTION			
			NODEL			

On the 5th tab of the Bridge settings, you can set all 2D and 3D representations parameters.

## Pavement, Sidewalk tool

To create Pavements or Sidewalks users can use Architerra Plus fill to define the shape of the elements more freely.

🔏 Sidewalk settings					?	×									
A ARC	HITERR	A				atar.hu/									
Sidewalk		2D/3D view				Creation									
	5	<u>چ</u>	Concrete - 02	20_U 30_U		36	•	• :	••••						•• ]
		E ID:	Site & Landscape - Terrain     SIDEWALK			Þ	-		<i>61</i> 	•••		•		. ·	 •
					Cancel	ОК	I			• •	•••	•	• •		 



### NOTE:


The nodes of the polyline are extremely important as they define the variations in altitude of the element. Architerra Plus uses these nodes to calculate the altitude of the element which will be placed on the ground with those coordinates (from the side selected as the reference side).

Select the fill and the terrain/mesh and click on the Pavement tool in the Architerra Plus toolbox to display the *Pavement settings dialog box*.

From this point, the procedure is the same as described in the above paragraph. Configure the settings as required and confirm by closing the dialog box by clicking OK.

Architerra Plus is waiting for the user to make two clicks to define information fundamental to creating the element.

The first two clicks must be performed on the two sides which identify the two ends of the pavement.

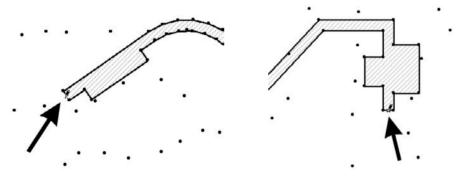

Click to define the starting side

Click to define the end side

### Note:


The fill must be designed completely on a Road or on a Plateau.



## **Modifying pavements**

The shape can be modified extremely easily:

- 1. In the map view (or the 3D view) by clicking on one of the perimeter nodes.
- 2. Click on the nodes, drag them and release them in the required position as it would be to modify any Archicad polygonal element (slabs, fills, etc).
- 3. After modification, click on the Data Update tool to update the preview of the element in the map view.

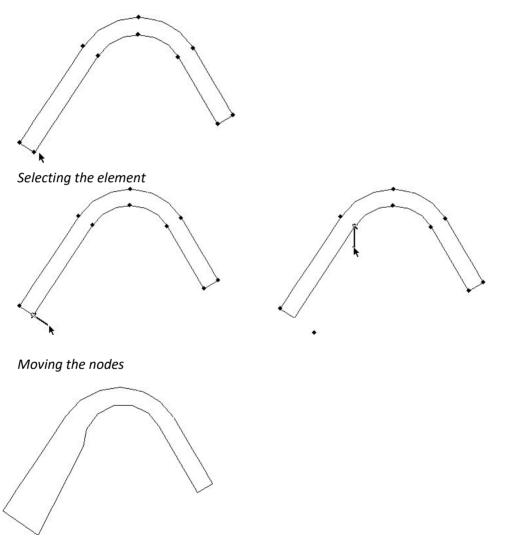

Updating the preview in the map view



## **Gradient tool**

The Gradient tool is a new tool. With this tool is possible to determine the slope value between 2 points of the terrain. The result of slope the tool can indicate on the floor plan in percentage and in degree, which can be set in the setting window of the tool.

Gradient settings		? ×
ARCHITERRA		eptar.hu/
		Creation
Text settings	Unit settings	
A_U 5 I ■ B / U M_1 3 mm	% α degree degree percentage	~
Arrow settings		
	ID: GRADIENT	eng 🕨
		Cancel OK


Process of work:

- select the Gradient tool, then click on first point (it's a start point), and after click on second point.


The add-on will calculate the slope and place the Arrow with the value.

Note: the value is calculated between two selected point, but these points are selected too far from each other, and between them different highs are, the value can be not a real slope value.



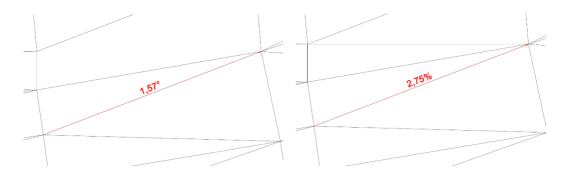

The placed Arrow is possible to modify with Hot spots, and with it's parameters in the Settings window.

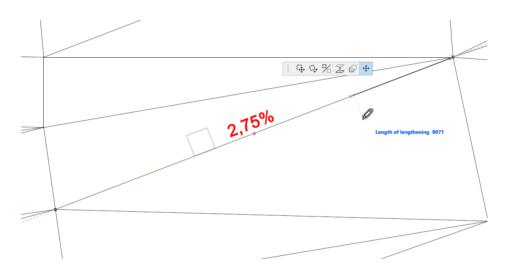



# **Random tree generation functions**

Click on the Random Generation tool and Architerra Plus immediately displays the *Tree settings dialog box*:



In the Geometry section it can be defined the total altitude of the tree, the angle of the branches with respect to an imaginary horizontal line (the value can be negative to generate conifers), the diameter of the trunk and the resolution used.



In the Number of Branches section, it can be defined the number of branches which start out from the trunk (and then from each subsequent branch). In the Complexity section, the user can define the number of repetitions.

For example, if the user set a Complexity value of 1, it will have a tree with just one series of branches starting out from the trunk.

If the user set a Complexity value of 2, it will have a tree with one series of branches starting out from the trunk, then another series of branches starting out from each of the previous branches.

#### **IMPORTANT:**

Obviously the higher the values used, the more realistic and effective the result, but at the same time the more complex the calculation. Aim for a good compromise to have trees which are quick to calculate, but sufficiently realistic.

In the Trunk and Leaf Style section, you can customize the resulting tree. The first popup menu allows users to choose between four possible trunk styles:

Trunk	
Custom	$\sim$
Style 1 - Lines Style 2 - Cylinders	
Style 3 - Trunk	
Custom	

*Style 1 Lines*: Trunk and branches are simple lines.

- Style 2 Cylinders: Trunk and branches are simple cylinders (with the resolution set in the Shape section).
- Style 3 Trunk: Trunk and branches have a realistic appearance which simulates the natural shape of these elements.
- *Custom*: This enables the user to use a previously defined library element to represent the trunk and the branches (see the appendix for a description of how to customize these elements).

When users choose Custom style, the small button with an arrow shown below will be activated:

Trunk	
Custom	~

Click on this button to display a dialog box, enabling to select the library element to use to represent the trunk and branches. Once selected the element, the field on the left displays the name of the selected element. The

second pop-up menu allows you to choose between five possible styles of foliage:



	Leaves	Double	
	Without leaves	~	
	Without leaves		
	Style 1	3	
	Style 2		
ru	Style 1+2		
_	Custom		

Without leaves: No foliage, only the branches are represented.

*Style 1*: Groups of leaves with an elongated shape are used.

*Style 2*: Groups of leaves with a constant shape are used.

- *Style 1+2*: A mixture of groups of leaves with an elongated shape and with a constant shape are used.
- *Custom*: This enables to use a previously defined library element to represent the groups of leaves to be used (see the appendix for a description of how to customize these elements). When chosen Custom style, the small button with an arrow shown below will be activated.

Click on this button to display a dialog box, enabling to select the library element to use to represent the groups of leaves. Once selected the element, the field on the left displays the name of the selected element.

NOTE:

The Double checkbox above the leaf style selection pop-up menu allows the user to double the foliage elements. The tree will be considerably more realistic, but slower to process.

In the Trunk and Leaves Material section, the user can select the material used for these two components of the tree.

The 2D Symbol section allows to manage the method used to display the tree on the map:



A small preview displays the style currently selected, while the small button at the bottom right opens a dialog to configure the 2D symbol (see detailed description below).

The last section at the bottom right, Tree Settings, is extremely important:





The Architerra Plus random tree generation function is extremely powerful but requires configuration of numerous parameters which can at times become tedious.

What is more, once it has been achieved the required result,

the user may want to repeat it in the same project or in other projects without having to configure it again, or without wasting time taking notes enabling you to reconfigure it.

In this case, use the Save Settings... button to save the current configuration which can then be used at any time by using the Load Settings... button.

It will, however, never obtain two completely identical trees. At each insertion, Architerra Plus introduces small variations which make each tree different from all the others. Finally, the pop-up menu at the bottom right allows to choose the layer where the element will be stored.


When the settings are confirmed with the OK button, the procedure to insert the trees in the worksheet begins.

This procedure follows a cycle. After inserting one tree, Architerra Plus waits for the click on the worksheet again to insert another, without having to configure the parameters.

To exit from the cycle, use the standard Archicad procedure (Esc on the keyboard, or Cancel on the Control Bar).



## Configuring the 2D tree symbol

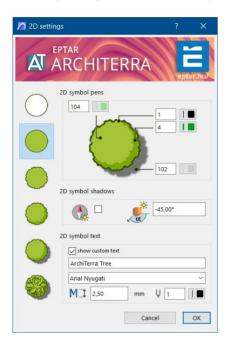

The key panel on the left allows to choose between six styles for the 2D symbol.

The 2D Symbol Pen section can be used to select:

- •The pen used for the fill of the foliage.
- •The pen used for the outline of the tree.
- •The pen used for the shading of the foliage (if the symbol includes shading).
- •The pen used for the shadow of the tree (if the symbol includes the shadow).

Below, the 2D Symbol Shadows section allows to manage the shadows in the symbol (if the symbol includes a shadow).

If the first checkbox is activated, the shadow follows the current sun settings configured in the 3D Projection settings dialog box.



The second field considered only if the check-box on the left is disabled, throws the shadow at the specified angle.



In the 2D Symbol Text section the user can display text on the symbol (by activating the relevant checkbox). The string displayed is given in the field below (default string: "Architerra Plus Tree"). The character, size of character and pen used for the text can be configured immediately below.

✓ show custom text	
ArchiTerra Tree	
Arial Nyugati	$\sim$
M‡ 2,50 mm	↓ 1

### Changing the parameters of a tree already inserted

As described, Architerra Plus trees are in every way Archicad library elements.

To change the parameters of a tree already inserted:

- 1. Select the tree or trees in the map view.
- 2. Click on the Random Generation tool.
- 3. Architerra Plus automatically displays the *Tree settings dialog box* where it can be made the required modifications.
- 4. Confirm with the OK button.



# **Basin tool**

Architerra Plus allows to "fill" the terrain by generating a plane at the user defined altitude, modelled according to the land morphology.

The principle is simple. The user indicate the altitude of this plane by clicking on the terrain and Architerra Plus automatically calculates its perimeter.

In the Basin section, it can be configured the pen for the 3D display of the basin and its surface material.

A Basin settings	?	×
ARCHITERRA	ep	ar.hu/
		Creation
Basin		
3 <u>D U</u> 6		
Water - Pond		
2D view		
2D U 6		
Solid		
Background		•
	05	
Site & Landscape - Terrain		Þ
ID: BASIN		
Cancel		ОК




In the 2D View section, the user can select:

- The pen used for the outline of the basin in the map view.
- The line type for its outline.
- The fill used for the hatching the checkbox to activate hatching of the area covered by the basin.
- The pen used for the fill hatch the pen used for the fill background.

In the Listing Attributes section, users can define an identification string for the Basin. In the last pop-up menu, it can be selected the layer where the element to be created will be stored.

Confirm the modifications with the OK button and then, when the box closes, click with the cursor on a point on the terrain/mesh to define the altitude of the basin:

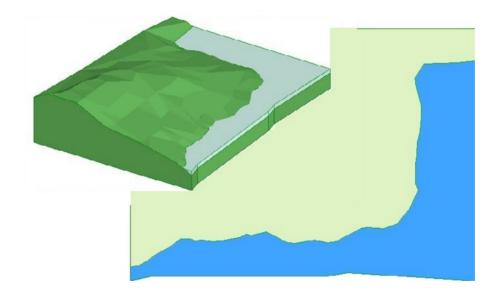

After a short process, the basin will immediately be displayed in the map and 3D views:




# **Building tool**

Use this simple tool to generate the volume of buildings on the terrain.

The principle is simple: Define the solid perimeter to process using Archicad graphic primitives (fills or polylines) and then transform the 2D perimeter into a three-dimensional element by defining the altitude.

After drawing (in the example below, using the Archicad Fill tool) the perimeter of the building to be created, select it together with the terrain/mesh on which it stands:

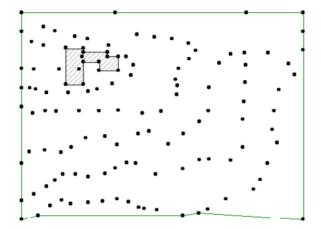

#### NOTE:

From this version it can be selected collectively more buildings together. Important is only that the selected buildings have the same altitudes.

Then click on the Building tool icon in the Architerra Plus toolbox to display the *Building settings dialog box*:



Building settings	?	×
ARCHITERRA	ept	ar.hu/
Buildings		Creation
6113		
6		
Paint - Titanium White		Þ
Sloped Roof		
25,00°		
Roof - Asphalt Shingle Green		
2D/3D view		
20 U 1 Backg	round	•
3 <u>D U</u> 1 I ■		
Site & Landscape - Terrain		Þ
ID: BUILDING		
Cancel		ОК

The first field defines the altitude of the eaves of the building to be created as the relative altitude (the height of the building, in other words, the distance from its lowest point to the line of the eaves).

The checkbox below activates/deactivates display of the roof. This is an automatic roof which will approximately represent the roof of the building to be created.

The following field defines the pitch of the roofs (if displayed). On the right, a whole value manages the approximation of any curved parts of the building to be created.



The subsequent pop-up menus allow the surface material used for the solid part and roof (if displayed) of the building to be defined.

In the 2D/3D View section, the user can configure:


- The pen used for the outline of the building in the map view.
- The pen used for the outline of the building in the 3D view.
- The fill used for the building in the map view.
- The pen used for the fill hatch.
- The pen used for the fill background.

Immediately below in the Listing Attributes section, it can be defined an identification string for the building object. The last pop-up menu defines the layer where the element will be stored.


#### **IMPORTANT:**

At the bottom left of the dialog box, there is a checkbox named cancel primitives.

If this checkbox is activated, when the dialog box is closed using the OK button, Architerra Plus will automatically cancel the 2D primitives used to define the shape of the element from the worksheet. If the checkbox is left disabled, the primitives will not be automatically cancelled. Confirm the modifications with the OK button and Architerra Plus will immediately insert the building calculated:

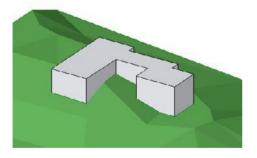

Building without roof

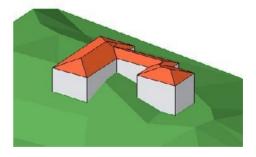

Building with automatic roof




## Modify the buildings

Buildings are parametric objects (AT3_BUILDING) and can therefore be modified at any moment.


The shape can be modified following the steps below:

1. In the map view (or the 3D view) select the building by clicking on one of the perimeter nodes.

2. Click on the nodes, drag them and release them in the required position as it would be to modify any Archicad polygonal element (Slabs, Fills, etc).

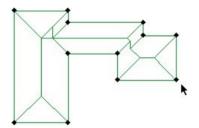

Selecting the building

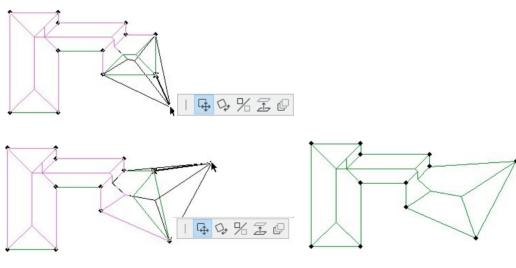

Dragging the nodes

The modified building



# Wall tool

The user can generate walls following the surface of the terrain with this simple tool.

#### **IMPORTANT:**

Be careful not to confuse Architerra Plus walls with Archicad walls. Archicad walls are project building parts, Architerra Plus walls are parametric library parts used for a different purpose.

To generate an Architerra Plus Wall, use the Archicad Polyline tool in the map view to define its reference line (which could include curved sides).

Then select this polyline and click on the Wall tool icon in the Architerra Plus toolbox. The Wall Settings box will immediately be displayed:

🔁 Wall settings	?	×
ARCHITERRA	ej	btar.hu/
Wall		
3000	<del></del> +	<u>7772</u> *
450		
24		
3D view		
3D U 99 Paint - Titanium White		Þ
2D view		
20 U 1 Masonry B	lock	Þ
Site & Landscape - Terrain		Þ
ID: WALL		
Cancel		ОК



The user can define the height of the wall (constant along the full length) and its thickness, while the three buttons on the right define the position of the wall with respect to its reference line.


In the 3D View section, the user can configure:

- The pen used for the wall in the 3D view.
- The approximation for curved parts of the wall.
- The surface material used for the wall.

In the 2D View section, the user can configure:

- The pen used for the wall in the map view.
- The hatched fill of the wall in the map view.
- The pen used for the fill hatch.
- The pen used for the fill background.


In the Listing Attributes section, it can be defined an identification string for the wall object and in the last pop-up menu allows to define the layer where the element will be stored.

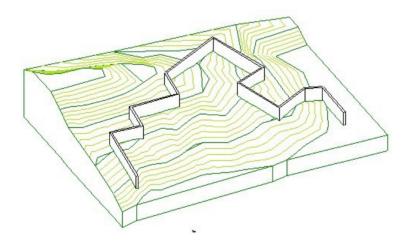




### The altitudes of Architerra Plus Wall nodes

When the reference line of an Architerra Plus Wall is defined using the Archicad polyline tool, the number and position of the nodes in the polyline are fundamental as Architerra Plus uses these nodes to extrapolate the altitude of the base of the wall to generate. Here is an example to clarify this concept.

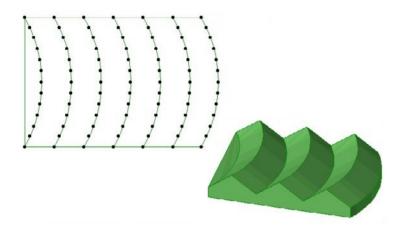

The previous image shows terrain with a zigzag altitude.


Now draw an ARCHICAD polyline consisting of three nodes only as shown in the following image:

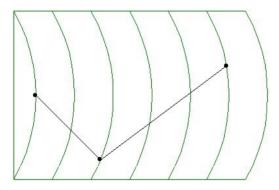


As explained above, when this polyline is transformed into an Architerra Plus wall, Architerra Plus will use the three nodes to acquire information on the altitudes of the terrain and then construct the resulting wall. Then select the polyline and the terrain/mesh and click on the Wall tool in the Architerra Plus toolbox to display the Wall settings dialog box, confirming the default configuration.



The resulting wall will be similar to the following:

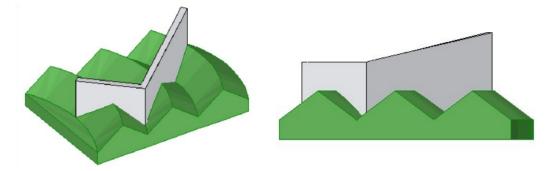

If the user draws another polyline using more nodes the result is significantly different:

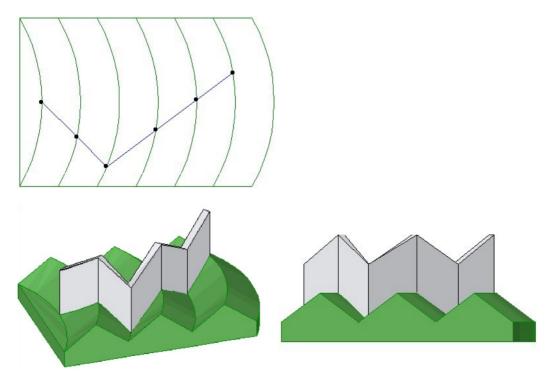



The user must therefore be careful when define the polyline for the wall reference line. The final result of the operation as Architerra Plus will build the wall on the basis of the nodes in the polyline which the user drew.

TIP:


The Retaining Wall tool uses a completely different algorithm (explained in the following chapter) which automatically follows the course of the terrain altitude. It is up to the user decide in each case the most appropriate tool for the walls he/she wish to create on the terrain surface.

## **Modifying Architerra Plus Walls**


Architerra Plus walls are parametric objects (AT3_WALL) and can therefore be modified at any moment.


The shape can be modified following the steps below:

- 1. In the map view (or the 3D view), select the wall by clicking on one of the nodes in the reference line.
- 2. Click on the nodes, drag them and release them in the required position as it would be to modify any ARCHICAD polygonal elements (Slabs, Fills, etc).

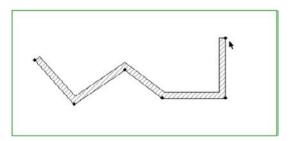


Select the Architerra Plus wall

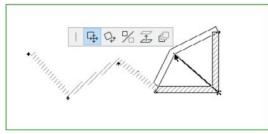

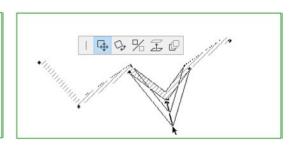

Moving the wall nodes



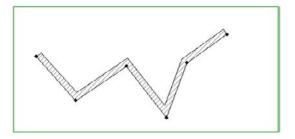

The modified Architerra Plus wall

### IMPORTANT:

Modifying the position of the nodes on the reference line introduces obvious incongruence in the information on the altitude of these nodes.

To update the altitudes of the moved nodes and then restore congruence with the terrain model, select the Architerra Plus wall modified graphically and click on the Data Update icon in the Architerra Plus toolbox.

The procedure used to modify the parameters of an Architerra Plus wall is in every way similar to that used to modify any ARCHICAD library element:

- 1. Select the walls in the map view by clicking on one of the nodes of the reference line.
- 2. Click on the icon of the relative tool in the Architerra Plus toolbox to display the settings dialog box.
- 3. Carry out the necessary modifications.
- 4. Confirm the modifications by closing the dialog box with the OK button.

### **IMPORTANT:**

The wall object can also be used to draw fences or rails. These functions can be accessed by selecting the object and accessing its configuration by the ARCHICAD Object settings dialog box. Consult the Appendix for more detailed information on these characteristics.



# **Retaining Wall tool**


The Retaining Wall can be used to draw walls which follow the course of the terrain or retain slopes in Architerra Plus elements (just like actual retaining walls).

### Creating a retaining wall

To generate a retaining wall, you first need to use an Architerra Plus Polyline in the map view to define its reference line (which could include curved sides). The algorithm used to generate this type of wall is completely different from the one used for Architerra Plus walls (as already noted in the previous paragraph).

The altitudes of the base of the wall are calculated precisely on the basis of variations in the altitude of the terrain.

To underline this characteristic, in the following example we have traced an ARCHICADpolyline consisting of just two nodes (at the ends) on terrain with a highly irregular altitude.

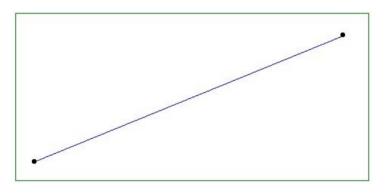

Select this polyline and click on the Retaining Wall tool icon in the Architerra Plus toolbox.

Architerra Plus immediately displays the following Retaining Wall settings dialog box:



🔼 Retainer wall settings	? )	×
ARCHITERRA	eptar.h	efault
Wall		
500		
500		
<u>α</u> 90,00°		
β_∠] 90,00°		
6		
3D view		
3D U 1 Concrete - 04	IIII 🖾 🕨	
2D view		
2D U 1 Masonry Block	. 1	
Site & Landscape - Terrain	J	
ID: RETAINING WALL		
Cancel	OK	

In the Wall section at the top you can define:

- The height of the wall (the distance between the altitude of the extrados and the altitude of the terrain on the reference line side).
- The thickness of the wall.
- The angle of the left surface (with respect to the reference line).
- The angle of the right surface (with respect to the reference line).




In the 3D View section, the user can configure:

- The pen to represent the element in the 3D view.
- The resolution of any curved sides. •
- The surface material. •

In the 2D View section, the user can configure:

- The pen to represent the element in the map view.
- The fill used in the map view.
- The pen used for the fill hatch.
- The pen used for the fill background.

In the Listing Attributes section, the user can define an identification string for the element. In the bottom pop-up menu, it can be chosen the layer where the element will be stored.

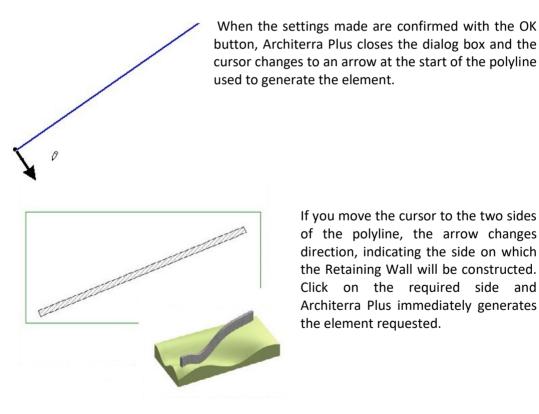

If you move the cursor to the two sides of the polyline, the arrow changes direction, indicating the side on which the Retaining Wall will be constructed. Click on the required side and Architerra Plus immediately generates the element requested.




## **Modifying Retaining Walls**

Architerra Plus retaining walls are parametric objects (AT3_RETAINING_WALL) and can therefore be modified at any moment.

Given the complexity of the element and its characteristics (following the land morphology), the shape of this type of element in the map view cannot be changed, but it can be graphically modify the height in the 3D window:


- 1. Select the retaining wall in the 3D window by clicking on one of its surfaces.
- 2. Click on the top nodes of the wall, drag them and release them in the required position as it would be to modify the height of any ARCHICADGDL object.

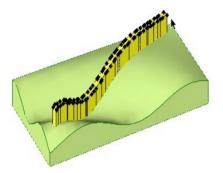

+ 4,4,%,%

Select the Architerra Plus retaining wall

Moving the top nodes of the wall

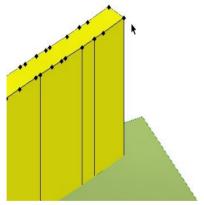


The modified Architerra Plus retaining wall




## Creating a retaining wall as an obstacle

As already mentioned, as well as creating single walls which follow the course of the surface of the terrain, a Retaining Wall can also be used as an obstacle to limit elements calculated on the terrain itself, just like a genuine retaining wall. Let's take a look at the following example:

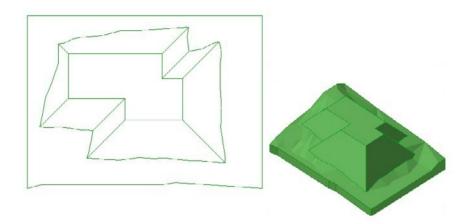

Here you can see a terrain/mesh with a plateau whose scarps rest on the majority of the terrain. Suppose that the scarps on the bottom and right sides of the map must be limited as shown by the dotted line in the following image:

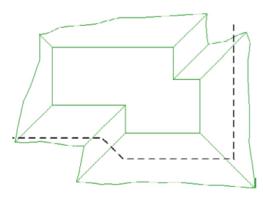


Limiting elements using a Retaining Wall is quite easy.


Firstly, we can only limit elements which have already been "constructed" on the terrain. The logic is that it must first "construct" the element, then subsequently "limit it".



Use an ARCHICAD polyline to define the obstacle (take care to use open polylines only!). Then proceed as follows:

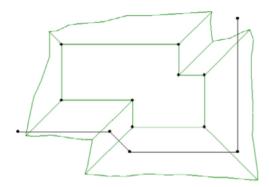


Select the element to be limited (in our example, a plateau) and the polyline representing the obstacle and then click on the Retaining Wall icon in the Architerra Plus toolbox.

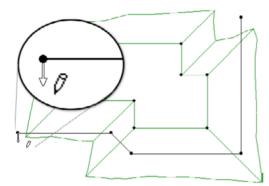


Once clicked the Retaining Wall icon, the procedure begins and the cursor changes to an arrow at the start of the polyline used to generate the obstacle.

Click on the wanted part to limit/eliminate and Architerra Plus immediately limits the intervention along the selected polyline and insert the Retaining Wall.

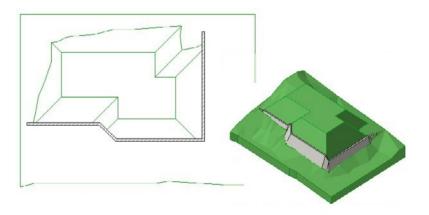



The following diagram shows the meaning of the values in the Wall section of the Retaining Wall settings dialog box:

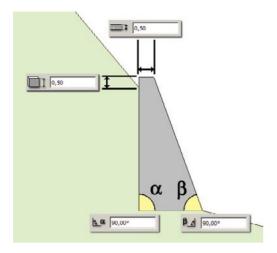




# **Coloured Area tool**

The user can use this simple tool to colour the terrain surface.

The perimeter of the coloured area can be define using an ARCHICAD fill and Architerra Plus colours the terrain following the settings.

### NOTE:

This version uses a single highly parametric object (AT3_PAINTER) for each piece of terrain to manage all the coloured areas defined by the user. Define the surface (or surfaces) to be coloured in the map view using Architerra Plus fills.

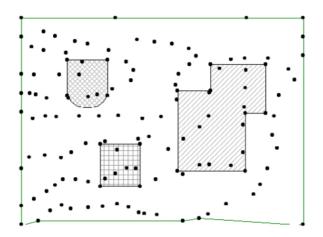

### TIP:

Use different fills (or different pens) if colour a number of separate areas at the same time. This enables to distinguish the various surfaces (and thus assign the correct attributes) in the fill list in the coloured Area settings dialog box.

Select the fill (or fills) and click on the coloured Area tool icon in the Architerra Plus toolbox.

You will immediately have access to the coloured Area settings dialog box:



Coloured Area settings			?	×
		2)		ptar.hu/
				Creatio
2D ⊕ ✓ 1 ⊕ _ € 6	Site & Landsca	ape - Terrain		Þ
2 Id	ID: COLOURED AREA			
	U.V. V.V.	∎ IJ		Û
1* 📃 Paint - Cadmium	4 4		10	^
2* Paint - Cadmium	3 3		10	
3* 📕 Paint - Alizarin Ca 🕨 💻	8 8 8	• 0	10	
				2
			Cancel	OK

In the coloured Area settings dialog box, there is a list of all the fills and their assigned attributes. The information listed in the columns are, from left to right:

- Progressive number of the surface.
- Material used for the surface.
- Fill used in the map view to represent the surface.
- Pen used for the fill out line in the map view.
- Pen used for the fill hatch in the map view.
- Pen used for the fill background in the map view.
- Elevation of each individual coloured surface with respect to the terrain.

To edit the values of a line, click on the line to select it and use the fields to define the values. The two top sections of the dialog box are used for general configuration of the object representing the coloured areas. At the top left, there are:



A check-box to show/hide the coloured areas in the map view.



A check-box to show/hide the progressive numbers of the individual coloured areas. Activate it to highlight the correspondence between the coloured areas in the map view and those listed in the list in the coloured Area settings

dialog box.





Global elevation of the colored surface with respect to the terrain. Use this value to modify the global position of the coloured areas with respect to the terrain with a single setting.


At the top right the user can:

- Configure the resolution of curved parts of the coloured areas.
- Define an identification string for the coloured Area object (AT3_PAINTER).
- Choose the layer where the element will be stored.

### **IMPORTANT:**

At the bottom left of the dialog box, there is a check-box named cancel primitives.

If this check-box is activated, when the dialog box is closed using the OK button, Architerra Plus will automatically cancel the 2D primitives used to define the shape of the element from the worksheet.

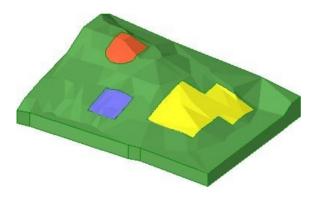


### **Modifying colored Areas**


Coloured areas are managed by a parametric object (AT3_PAINTER) and can therefore be modified at any moment. The shape can be modified following the steps below:

- 1. Select the coloured areas in the map view by clicking on one of the edge nodes.
- 2. Click on the nodes, drag them and release them in the required position as it would be to modify any ARCHICAD polygonal elements (Slabs, Fills, etc).




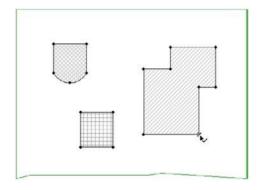

Selecting the coloured areas

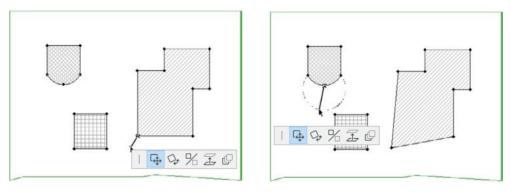

Dragging the nodes

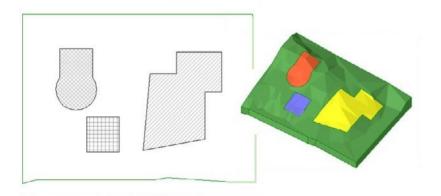


The modified coloured areas



### Managing overlapping-coloured areas

When there are overlapping coloured areas, if they are not specifically configured, the result in the 3D view will not be satisfactory.

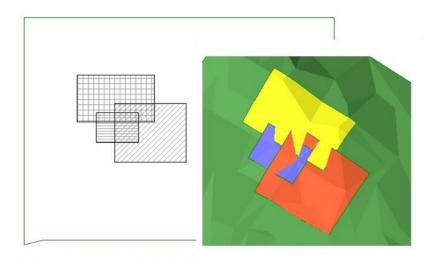


From a software point of view, this is easy to understand as the three areas are at the same level and therefore interpenetrating.

The problem is simple to resolve. Just act on the level of the three areas in such a way as to distribute them along the Z axis. The highest surfaces will have priority over lower ones. Then select the object representing the coloured Areas in the map view and click on the icon corresponding to the relevant tool in the Architerra Plus toolbox.

As no configuration was performed at the moment of creation, the elevation fields of the individual areas are configured to zero.

Let's imagine the user want to give the purple surface maximum priority, followed by the yellow surface, then the red surface.

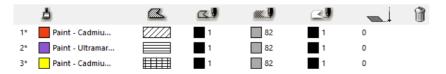




The elevations of the three overlapping surfaces must be suitably configured so that the purple is the highest, followed by the yellow, leaving the red in the current position:



Here is the new result in the 3D view:

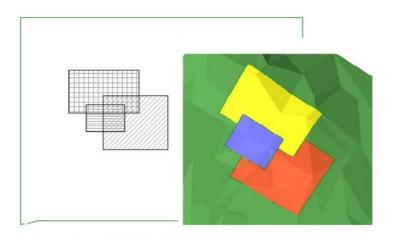




# Modify X-Y coordinates/modify Z coordinate toggle

This is also a simple toggle used in the 3D view to switch from graphic editing of the X-Y coordinates to graphic editing of the Z coordinate.

A click on the tool icon after selecting the object to modify will simply and easily switch from editing the position of the nodes on the horizontal plane to editing those on the vertical plane. Here is a simple example using a plateau:

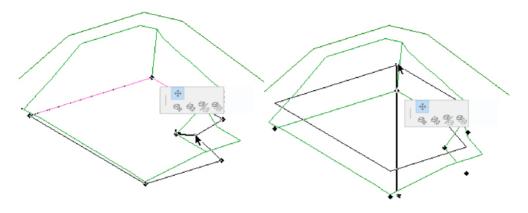

*Graphic editing of a node on the horizontal plane* 

*Graphic editing of a node on the vertical plane* 



## **Calculate tool**

One of the most interesting characteristics of Architerra Plus is the possibility of calculating the quantity of earth moved following interventions on the terrain.

Firstly, it is important to remember that the calculation of quantities must be updated each time to take account of possible graphic modifications performed by the user as part of the project.

The Calculate tool is used for this purpose. It updates all data to faithfully reflect the current situation.

This starts the procedure (which requires a few seconds of processing) to update the quantities relating to the terrain selected.

At this point, the user can use the "Base (Architerra Plus _DB)" components list, and the new listing format (ArchiTerra - Component List) located on the Navigation bar of ARCHICAD to view the quantities associated with the interventions on the terrain:

Descriptor/Keys ArchiTerra - Component List (Archi				002 ROAD3 - Fill 003 ROAD2 - Fill	16 934 m3 1 m3		
Default			Architerra - Fill	001 ROAD4 - Fill	2 m3		
Basic				004 ROAD1 - Cut 005 ROAD JUNCTION_0 - Cut	-88 m3 -116 m3		
✓ A Components				003 ROAD2 - Cut	-62 m3		
> ZZZZ Elements				001 ROAD4 - Cut 002 ROAD3 - Cut	-12 m3		
✓			ArchiTerra - Cut				
> 📰 Project Indexes			TERRAIN	item iD	value	Balance	
> 🚊 Surfaces			Data by terrains	Item ID	Value	Balance	
> 📇 Components			Date hu terraine			2024. 11.	
> IZZZ Elements			ARCHITER	RA			
✓ I Schedules			EPTAR				
Generic Perspective		Π.					
✓ [] 3D	IERRAIN 02				27.035,40 m	z 	.303,20 m3
3D Documents	TERRAIN 02 TERRAIN 02	1	002 TOTALI	PLATEAU 06	6,62 m 27.699,40 m		.363,05 m3 .363,28 m3
Details	TERRAIN 02	i		PLATEAU 05	27.692,77 m	-	0,23 m3
Worksheets	TERRAIN 02 TERRAIN 02	1		DESCRIZIONI	SCAV	0	RIPORTO
Interior Elevations	TERRAIN 01	1	TOTALI		8.688,84 m3	7.	644,06 m3
Elevations	TERRAIN 01	i.		ROAD 01	350,44 m3		651,05 m3
C Sections	TERRAIN 01 TERRAIN 01			PLATEAU 02 PLATEAU 03	0,00 m3 7.076,06 m3		374,63 m3 534,48 m3
		1		PLATEAU 01			83,90 m3
Q Search Project Map	TERRAIN 01 TERRAIN 01 TERRAIN 01			DESCRIZIONI PLATEAU 01	SCAVO 1.262,34 m3		RIPORT 83,90 m



The above table clearly shows the importance of identifying strings associated with the terrain/mesh and other elements or operations (excavations and roads). The first column gives the ID string identifying the terrain for which the quantities are displayed, while the second column gives the name of the element or operation calculated.

# Gravity on Terrain, Insert Objects

The Gravity on Terrain tool enables users to position ARCHICAD library elements precisely on the surface of the terrain.

This could also seem to be a duplicate of a function already present in ARCHICAD. This is not in fact the case, for the same reasons as explained by the Spot Heights tool. The ARCHICAD gravity function always refers to the originals points on the surface of the mesh and not to the surface resulting from modifications made with Solid Elements Operations (see the description in the Spot Heights tool for more detail).

To use the Gravity on Terrain function just follow the steps below:

- 1. Click on the Gravity on Terrain tool.
- 2. Architerra Plus immediately displays the following *Object settings dialog box* where you can select and configure the library element you wish to insert.
- 3. Confirm the configuration with the OK button and select the library element.
- 4. In the map view, click on the surface of the terrain/mesh to insert the object at those coordinates and at the altitude of the land at that point.

This starts with the object insertion cycle and each time the user clicks on the worksheet, a further object with the characteristics previously defined is inserted on the surface of the terrain.

To exit from the insertion cycle, click on Cancel in the ARCHICAD control bar or Esc on the keyboard (as well as all the other standard ways in the ARCHICAD interface).


# **Spot Heights tool**

The Spot Heights tool allows to display the data associated with the points/hotspots of the terrain/mesh and to attribute spot heights to your terrain/mesh.


In the former case, displaying the information memorized in the points, its usefulness is clear as Architerra Plus uses simple ARCHICAD hotspots to represent the points and



without this tool there would be no other way to view this information. When used to attribute spot heights to the terrain/mesh, it could seem to be a duplicate of the tool already present in the standard ARCHICAD toolbox. In fact, this is not the case. Here is a simple example, without using Architerra Plus, of correct use of the tool in ARCHICAD.

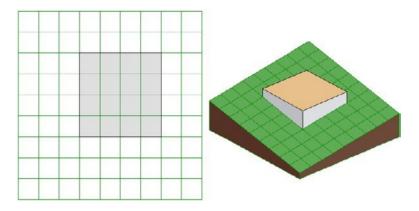

The above image shows a simple Mesh constructed with ARCHICAD into which a Slab has been inserted.

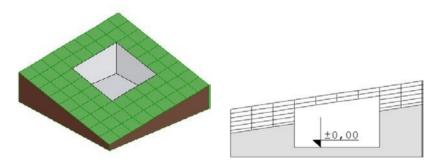


Using Solid Elements Operations, the volume of the slab is subtracted from the mesh: As can be seen in the cross section, the altitude of the mesh corresponding to the plateau obtained by subtracting the volume of the mesh is 0.00 meters.

We will now attribute spot heights to that zone of the mesh using the ARCHICAD Spot Heights tool and activating gravity to the mesh in order to view the level of the surface of the mesh at the points clicked:



As can be seen in the image, ARCHICAD still attributes spot heights at the original surface

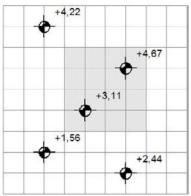


altitude (prior to the Boolean subtraction operations) without considering the modifications made using Solid Elements Operations.

As described before, all modifications which can be made by Architerra Plus on terrains/meshes are based on Solid Elements Operations and therefore the tool should be able to correctly attribute spot heights to the terrain, taking modifications made to the surface of the mesh into consideration.

## Attributing spot heights to survey points

Spot heights are attributed to survey points, in other words the points/hotspots used to construct the terrain/mesh, automatically.

Let's suppose we want to view the information on the points used to construct the terrain/mesh in the following image:

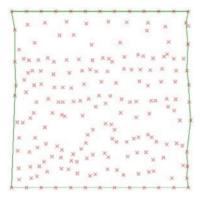

Without selecting any object (so Architerra Plus understands it must initiate the procedure to display the information on the points/hotspots present on the worksheet), click on the Spot Heights tool in the Architerra Plus toolbox.

Architerra Plus immediately displays the Spot Heights settings dialog box:



📉 Spot Height settings	?	×		
		Creation		
View				
$\Phi^{1,2}$ $\Delta^{1,2}$ $+^{1,2}$ $+^{1,2}$ $\Phi^{1,2}$ $\Phi^{1,2}$	1.2			
€ 3000 U 1.25	1			
<u>م</u>	1			
© 🗸				
Text				
Abc Arial Western		~		
M‡ 2,50 mm altitude		~		
🗌 abc				
🖅 💿 Site & Landscape - Terrain 🕨				
Cancel		ОК		

In the View section, it can be configured the appearance of the marker by choosing the style and defining the dimensions, angle and pen used to draw it. In the Text section, it can be chosen the font, size of character and possible use of italics for the string of information to be displayed.

The three radio buttons on the right define the information to be displayed:

Altitude: The altitude of the point will be displayed alongside.

Marker code: The code of the point will be displayed alongside the marker altitude.

*Code:* The altitude and the code of the point will be displayed alongside the marker.

The Map with spot heights section will be described below. In this case the options are disabled. The last pop-up menu allows the user to choose the layer where the GDL object (AT3_POINT_MARKER) used to represent the altitudes on the map will be stored.

Here is the result:

+* + *+



### IMPORTANT:

The information displayed relates to the points/hotspots in the map view worksheet. If the terrain/mesh has been modified subsequently, the spot heights will not correspond to its surface. It must be emphasized that this procedure has in any case been conceived to view information associated with the points/hotspots and NOT the terrain/mesh they generate.

### Attributing spot heights to the terrain

The procedure for attributing spot heights to points on the terrain/mesh (required to have correct altitudes even when using Solid Elements Operations), is as simple as the standard ARCHICAD procedure:

- 1. Firstly, select the terrain/mesh for which you want to view the spot heights.
- 2. Click on the Spot Heights tool in the Architerra Plus toolbox.
- 3. In the Spot Heights settings box which appears, configure the parameters as required.

#### NOTE:

In this case, the three radio buttons to select the type of information to display are not available. We are in fact viewing the spot heights of "random" points which do not correspond to the points/hotspots used to generate the terrain and which may include a code as additional information. The only information which can be displayed is the altitude of the point.

- 4. During this procedure, the Map with spot heights option is active, but we will skip it as it will be described in the next topic.
- 5. Close the settings dialog box and confirm configuration of the spot heights by clicking on the OK button.

The shape of the cursor changes (pencil cursor) and Architerra Plus waits while it is defined the point for which the user wants to view the spot height by clicking on the terrain/mesh previously selected.

The procedure is cyclic. After it has been clicked, Architerra Plus displays the spot height and waits for the user to click again before inserting another.

To exit from the procedure, click on Cancel in the ARCHICAD control bar or Esc on the keyboard (as well as all the other standard ways in the ARCHICAD interface). Each spot height inserted is a parametric GDL object (AT3_POINT_MARKER) which can be individually selected and edited to modify the parameters again, select them and click on the Spot Heights tool icon, modify the values, and confirm with the OK button.



## Creating maps with spot heights

A map with spot heights is a regular grid of spot heights describing the contours of the terrain.

The usual Spot Heights settings dialog box appears. All the other parameters operate in the way described above and here we will describe the characteristics of the Map with spot heights section only.

The first checkbox enables this option. If the checkbox is disabled, the procedure is used to enter individual spot heights, if it is enabled, the procedure defines the map with spot heights.

The two bottom fields define the horizontal and vertical grid size, in other words, the distance along the X and Y axes between each successive altitude.

### NOTE:


The spot heights must be extrapolated by Architerra Plus by processing the model of the terrain. The denser the grid of the map with spot heights, the longer it will take to process the AT3_POINT_MARKER object.

Confirm the configuration by clicking the OK button. Architerra Plus closes the dialog box and changes the shape of the cursor (pencil) waiting for the click on the terrain/mesh to define where in the map the spot heights will be inserted (in practice, the point indicated by the click will be one of the points on the grid of spot heights).

Architerra Plus immediately displays the following message: "Indicating the number of spot heights which will be generated (and therefore calculated) for the map with spot heights being inserted".

Click on Yes to accept the processing and after a suitable processing time (depending on the quantity of spot heights to be calculated and your hardware configuration), the map with spot heights will be inserted in the map view.



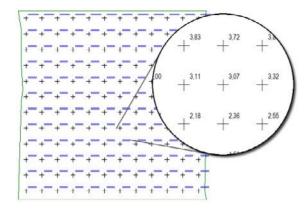

In this case, the entire map with spot heights is represented by a single AT3_ POINT_MARKER object. To modify the characteristics, select the AT3_POINT_MARKER object and click on the Spot Heights tool icon, modify the parameters, and confirm with the OK button.

### IMPORTANT:

The spot heights in this version of Architerra Plus cannot be updated (in other words, the spot height displayed is not updated when the terrain is modified). If you modify the land morphology, simply cancel the spot heights (whether individual or part of a map with spot heights) and reposition them to reflect the current situation.




## **Camera tool**

The user can use this tool to define Fly-Through routes so that each camera is automatically positioned on the surface of the terrain/mesh selected.

Let's look at a simple example of operation.

The following image shows a terrain/mesh in which a road has been drawn:

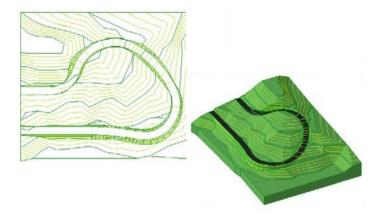


The aim is to create a route along the road which simulates what a driver on that road would see.

Firstly, use the ARCHICAD polyline tool to draw the desired route to create in the map view. Remember that the camera distribution procedure does NOT consider curved sections, in other words, if curved sides are present, it considers the chord joining the two ends of the arc.

It should be therefore avoided use curves (or remember that they will be approximated as described).




Here is the route to be transformed drawn with an Architerra Plus polyline:

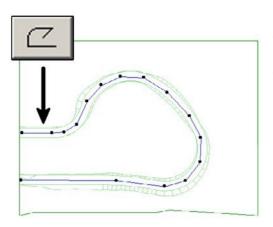


Next, select the ARCHICAD polyline defining the route where the cameras will be distributed and finally click on the Camera tool icon in the Architerra Plus toolbox.

Architerra Plus immediately displays the Camera settings dialog box:

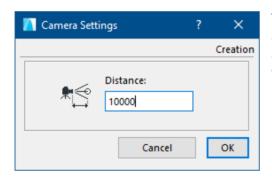

This dialog contains a single parameter the approximate distance between each camera along the route. Enter a value and confirm with the OK button.

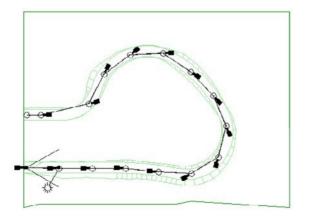



### NOTES:



The two elevation values for the camera point of view and focus are configured by Architerra Plus based on the current camera tool settings and the altitude of the

terrain/mesh at the insertion point. In practice, the altitude of the terrain has been added to the current default values of the camera tool.

Following the example below, the camera must be positioned at a point on the terrain at an altitude of 23.50 meters:

Camera Z Target Z	The current settings of the camera tool.
Camera Z Target Z	The two values for the camera inserted by Architerra Plus .
Camera Z Target Z	The current settings of the camera tool.
Camera Z Target Z R ¹ 2450 R ¹ 2450 2450	The two values for the camera inserted by Architerra Plus .

#### IMPORTANT:


As described above, the Camera tool is used to generate routes only. To modify the settings for the route or individual cameras, use the standard ARCHICAD procedure.



# Architerra Plus tool default settings

As with any other programs, Architerra Plus has default settings for pens, fills, layers, values, etc. Each time the user starts up ARCHICAD, Architerra Plus reads these default settings and proposes them in the various settings dialog boxes.

It could therefore be useful to configure "the own" Architerra Plus settings to automatically propose the most commonly used pens, fills, etc. And this is exactly what the Architerra Plus Default Tool Settings tool is for. To customize your Architerra Plus, configure all the dialog boxes as you prefer, setting your standard values and attributes. When you have completed this phase of configuration, click on the *Architerra Plus Default Tool Settings tool* to view the following dialog box:

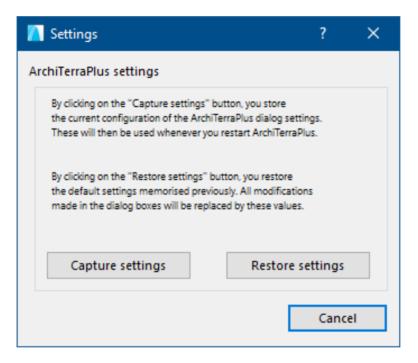

Click on the Capture Settings button to memorize the current configurations which will then become the default settings for the Architerra Plus . All this information will, in fact, be memorized in the AT3_PREFS GDL object used by Architerra Plus during initialization to set the default values. To reset the original default values for all values and attributes used by Architerra Plus , click Restore Settings. Click on the Cancel button to close the dialog box without modifying the programme settings.



# Help tool

Click on this button to view the user manual in pdf format.

To function correctly, it must have Acrobat Reader installed on the computer and the relative help document in pdf must be in the same folder as the Architerra Plus add-on.

# Appendix

This section of the manual takes a more detailed look at several subjects already covered in the manual:

- Data Update Tool.
- Architerra Plus library elements.
- Multiple use of the AT3_CONTOURLINES object.
- Further characteristics of the Architerra Plus wall.
- Customizing trunks and leaves.
- Problems with Solid Elements Operations.
- SOSI Files Import.



# Data Update tool

As has been described several times in the previous chapters of this user guide, this tool is used to update data on the worksheet, integrating it with the latest modifications introduced by the user.

Depending on the situation and contents of the selection, it may produce various results.

The following list sums up its possible uses.

## **Updating altitudes**

If the user selects a terrain and the relevant Architerra Plus altitudes, those altitudes will be updated.

## **Updating Architerra Plus walls**

If the user selects one or more Architerra Plus walls, the altitudes of the intrados of the wall (the level on which it rests) will be updated to correspond to the modified terrain.

## Updating the element preview

If the user selects one or more walls and terrains/meshes, the preview of the elements will be updated (if it has not already been updated automatically).

## Updating a basin

If the user selects a basin, this will be updated to conform to any modifications made to the terrain/mesh on which it is inserted.

## Updating a road longitudinal section


If the user selects a road in the map view, the corresponding longitudinal section data will also be updated conform to the road modified on the map. Updating a road on the map if the user selects the longitudinal section of the road, the original data of the road on the map will be updated to conform to the road modified in the section view.

## **Updating all elements**

If the user selects any element, its perimeter on the terrain will be updated. The following explanation uses a plateau.





The following image shows a "correct" plateau calculated on a terrain/mesh:

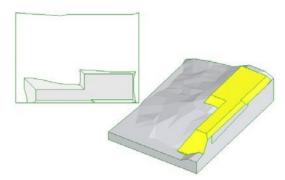

If the perimeter of the terrain is modified subsequently (in the following image, the hatched part of the map indicates the new perimeter of the terrain), for example by creating indentations, the result will be a "projecting" terrain as the shape of the original perimeter has been modified:

If you select the plateau and click on the Data Update tool, the list of terrain perimeter nodes will be updated, and the element will be displayed correctly:

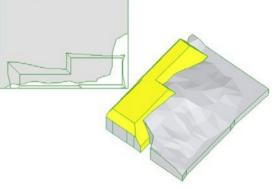

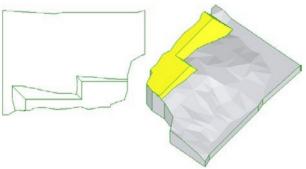



# **Architerra Plus library elements**

The Architerra Plus library contains a series of objects used by Architerra Plus to modify terrain or represent operations and elements. The main folder contains the following elements:

	Used for contour lines, the
AT3_CONTOURLINES.gsm:	function shows depth and a preview of elements and operations.
AT3_PREFS.gsm:	Used to memorize Architerra Plus default settings.
AT3_ROAD.gsm:	Used to create and represent roads.
AT3_SIDEWALK.gsm:	Used to create and represent pavements.
AT3_RETAINING_WALL.gsm	
AT3_PAINTER.gsm:	Used to represent colored areas.
AT3_SLOPED_PLATEAU.gsm	Used to create and represent sloped plateau AT3.
AT3_BASIN.gsm:	Used to create and represent basins.
AT3_LEVEL_MARKER.gsm:	Used to represent spot heights on the terrain and maps with spot heights.
AT3_WALL.gsm:	Used to create and represent walls, fences, and guardrails.
AT3_POINT_MARKER.gsm:	Used to display information on the points/hotspots used to generate the terrain.
AT3_PLATEAU.gsm:	Used to create and represent horizontal plateau.
AT3_BUILDING.gsm:	Used to represent buildings.
AT3_OBSTACLE.gsm:	Used to manage element obstacles.
SS_TREE folder:	Folder containing the library elements required to create and represent random trees.



	Folder containing images of the
IMGs folder:	library elements user interface
	dialogs.
MACROs folder:	Folder containing the macros
	required for the functioning of
	other objects.

Skipping the contents of the IMGs and MACROs folders, the SS_TREE folder (used to generate random objects) contains the following:

SS_TREE.gsm:	The random tree object
MASTER_GDL_AT30_MAT.gdl:	The GDL macro which, in ARCHICAD, automatically
Leaves styles folder:	Folder containing the various leaf objects/styles.
Tree macros folder:	Folder containing the macros used in the tree object.
Tree textures folder:	Folder containing the textures used in the standard default materials for a random tree.
Trunk styles folder:	Folder containing the various trunk objects/styles.



# Further characteristics of the Architerra Plus wall

As mentioned in the chapter describing the Architerra Plus Wall tool, once this library element has been processed and positioned in the map view by Architerra Plus, the user can modify its characteristics by exploiting its parametric qualities.

When the user selects the AT3_WALL object plan view (or 3D view), it can be displayed the standard ARCHICAD Object settings dialog box to access these characteristics:




The three buttons determine functioning of the object, from left to right:

Wall function: Standard use of the element. This is used to represent walls on the terrain.

Fence function: The object used to represent fences on the terrain.

*Guardrail function:* The object used to represent guardrails on the terrain.


When the user choose either the Fence or Guardrail option, a further button is displayed to customize the element settings:

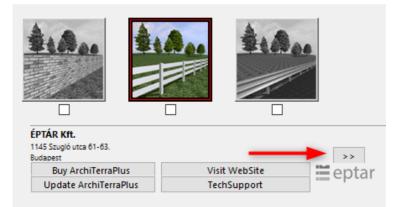



## **Fence function**

By choosing this function in the main key panel and then click on the settings definition button, a dialog box to customize the fence will appear.

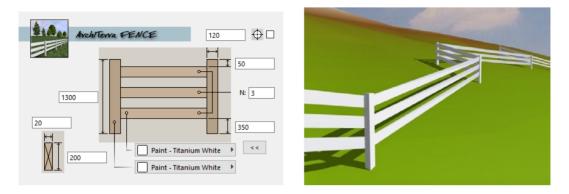

The user can configure the altitude and size (side or diameter) of the vertical elements and choose whether they are square or round.

It also can be defined the number of horizontal elements (N field) and their offset from the base and top and the size of their cross section.

Two pop-up menus allow to define the surface material for the horizontal and vertical elements.

#### NOTE:


In this case, the thickness and height defined by the Architerra Plus Wall settings dialog box are irrelevant as the thickness and height of the fence depends on the configuration in the Object settings dialog (side/diameter of vertical elements).

### TIP:


The vertical elements correspond to the nodes of the polyline used to generate the wall element, so when the user want to create a fence, she/he are consequently defining the nodes of the polyline.

In the two following examples, it is possible to see how the number of uprights changes according to the nodes on the polyline used:



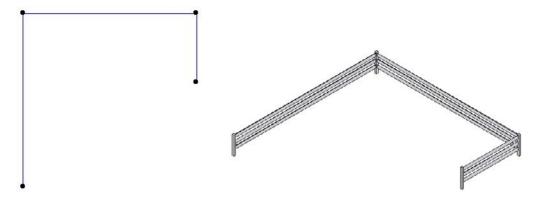

A polyline with four nodes generates a fence with four uprights.

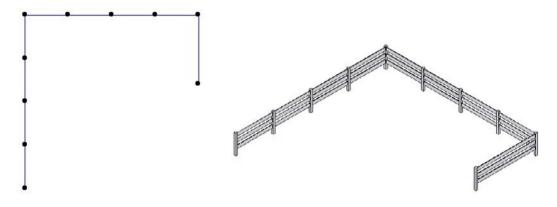


A polyline with ten nodes generates a fence with ten uprights.



## **Guardrail function**

By choosing this function in the main key panel and then click on the settings definition button, a dialog box to customize the guardrail will appear.

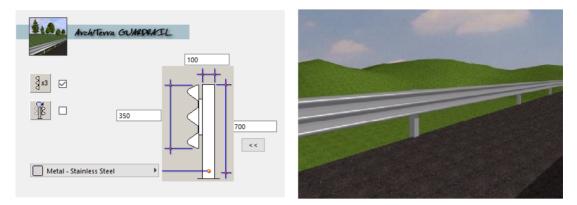

The user can configure the height and size of the vertical elements.

It also can be configured the height of the barrier if it is made up of two or three elements and the side on which it is inserted.

A pop-up menu allows the surface material to be defined.

#### NOTE:


In this case, the thickness and height defined by the Architerra Plus Wall settings dialog box are irrelevant as the thickness and height of the guardrail depends on the configuration in the Object settings dialog (side/diameter of vertical elements).

### Tip:


The vertical elements correspond to the nodes of the polyline used to generate the wall element, so when the user want to create a guardrail, she/he are consequently defining the nodes of the polyline.

In the two following examples, it is possible to see how the number of uprights changes according to the nodes on the polyline used:



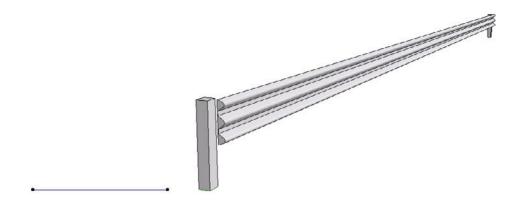

A polyline with two nodes generates a guardrail with two uprights.

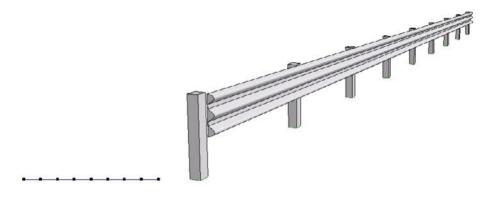

A polyline with nine nodes generates a guardrail with nine uprights.




## **Customizing trunks and leaves**

By using the following tips and a little imagination and application, the user can further customize their random trees by generating trunks/branches and fronds according to their taste.

### Trunks

As already seen, Architerra Plus already includes several trunk/branch styles:

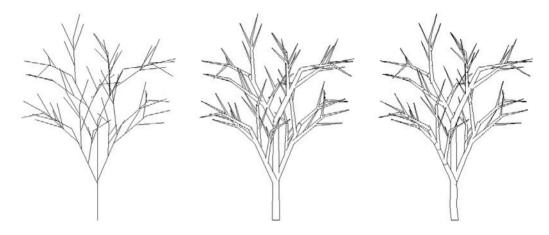


Style 1 Lines

Style 2 Cylinders

Style 3 Trunk

These three styles correspond to three GDL objects used by the SS_TREE object to generate the trunk and branches:

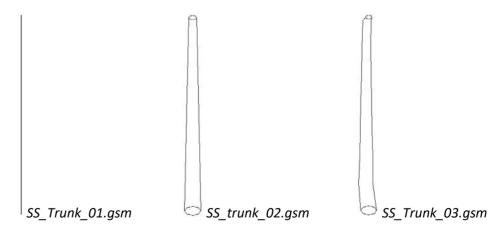



Now we will try and create a custom trunk without using GDL programming.

## Spiral trunk

Let's try and create a strange tree with trunk and branches consisting of spirals. Without using GDL, we will take an element present in the standard ARCHICAD library, the spiral.

Object Default Settings	?	×
Spiral 21		Default
▼ □1 PREVIEW AND POSITIONING		
100 Home Story: 0. Ground Floor (Current) to Project Zero ► 100 ↓ 1050 ↓ 1050		
Image: 1000         Relative ►           0.00*         0.00*		3 120
CUSTOM SETTINGS		
Eloor Plan and Section		
MODEL		
CLASSIFICATION AND PROPERTIES		
ARCHIQUANT 2		
Cancel	0	Ж

Configure the parameters of the object to obtain a result similar to the following:

Now let's display an object with the following settings as a plan from above in the 3D view:

Parallel Projection Settings	? ×
	Perspective Settings
x	Angle         Avis Length           X:         0.00°         1000           Y:         90.00°         1000           Y:         90.00°         1000           Y:         0.00°         1000           X:         0.00°         1000           X:         0.00°         1000           X:         0.00°         0           X:         0.00°         0           X:         0.00°         0
	Sun Position: O Date and Time   Custom
	Altitude         Azimuth           Δ         21.58°         Δ
Pre-Sets Sunlight	Cancel OK



The 3D view will appear as follows:



With the 3D view at the front, from the File menu choose the GDL Objects.../Save 3D Model as... command.

In the save box which appears, enter a name for the object and choose to save it (we suggest to use the Trunk styles folder in the Architerra Plus library), confirming with the OK button.

In the subsequent dialog, select the object format icon and activate the non-editable 3D Binary Format option, then click on the Save button.

The first part is over, and the object must now be modified to make it a custom trunk/ branch in the Architerra Plus library. From the File menu, choose the GDL Objects.../ Open Object... command and select the spiral branch just saved to modify it.

ARCHICAD will open the library element editing window.

At the top right, click on the Select Subtype button... and in the list which appears select the SS_Trunk_Subtype subtype (in the Model Element item), then confirm the choice with the Select button.

Now it must add a number of GDL texts (always the same, don't worry!). In the Master text window (which will be empty), add the following two lines:

```
A=raggio_1 B=raggio_1
```



At the beginning of the 3D GDL Text box, add the following lines:

ADD - A/2, - B/2, 0

MATERIAL mat

At the bottom of the GDL text, find the command BINARY 0, 1 and replace the first 1 with a zero:

BINARY 0,1

Finished!


Record the modifications to the spiral branch and it is ready to use it.

Now generate a random tree (as described in the relevant chapter) and in the Trunk and Leaf Style section:

Trunk		
Custom	~	
custom_trunk	►	

Select the custom style option in the trunk style pop-up menu, then by clicking on the arrow button on the right, select the spiral branch.

Confirm the modifications with the OK button and here is the tree, consisting of a series of spirals in place of the trunk and branches:

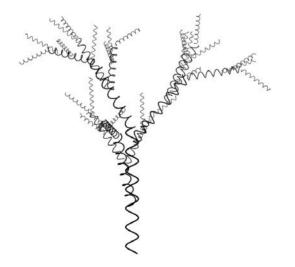




#### NOTE:

Experts in GDL programming will obviously be able to obtain much more satisfactory results. Take a look at the script for the three pre-defined trunk styles to understand how they work.

#### Leaves


As already seen, Architerra Plus already includes a number of leaf frond styles:

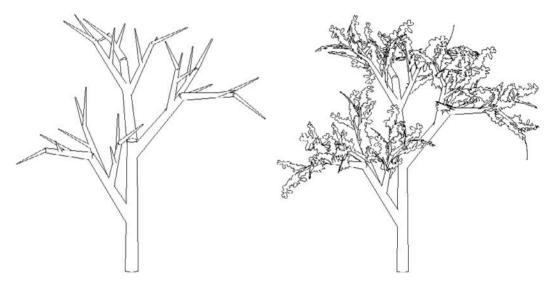

Without leaves

Style 1



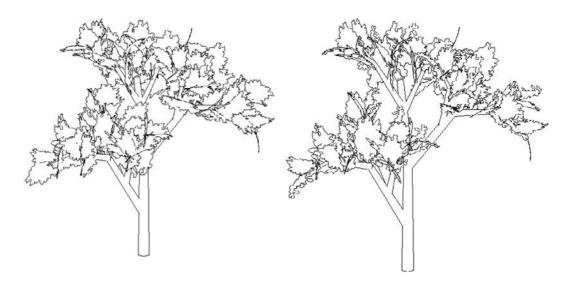



Style 1+2

These three styles correspond to three GDL objects used by the SS_TREE object to generate the fronds:




SS_Leaves_00.gsm SS_Leaves_01.gsm SS_Leaves_02.gsm

Now we will try and create a custom frond without using GDL programming.



## Star frond

Let's try and create a strange tree with star-shaped fronds. Use a zero-thickness ARCHICAD slab to draw the star:

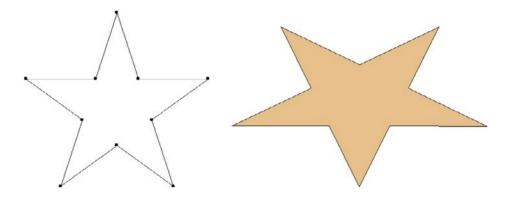


Select it and view a plan from above of the slab in the 3D view with the following settings:

Parallel Projection Settings	? ×
	Perspective Settings
G ^y	Top view           Angle         Axis Length           X:         0.00°         1000           Y:         90.00°         1000           Z:         0.00°         0           Azimuth         270.00°         270.00°
	Sun Position: Date and Time * Altitude 21.58°  Sun Position: Custom * Azimuth a 355.05°
Pre-Sets Sunlight	Cancel



The 3D view will appear as follows:

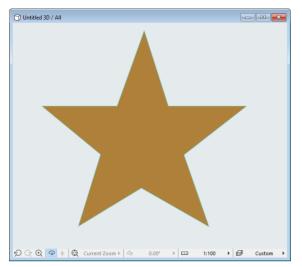

With the 3D view at the front, from the File menu choose the GDL Objects.../ Save 3D Model as... command.

In the save box which appears, enter a name for the object and choose to save it (we suggest to use the Leaves styles folder in the Architerra Plus library), confirming with the OK button. In the subsequent dialog, select the object format icon and activate the non-editable 3D Binary Format option, then click on the Save button.

The first part is over, and the object

must now be modified to make it a custom frond in the Architerra Plus library. From the File menu, choose the GDL Objects.../Open Object... command and select the star frond just saved to modify it.

ARCHICAD will open the library element editing window. At the top right, click on the Select Subtype button... and in the list which appears select the SS_Leaves_Subtype subtype (in the Model Element item), then confirm the choice with the Select button.

Now it must add a few GDL texts (always the same, don't worry!).

At the beginning of the 3D GDL Text box, add the following line:

ADDx -A/2

At the bottom of the GDL text, find the command BINARY 1, 1 and you should replace the first 1 with a zero:

```
BINARY 0, 1
```

Finished!

Save the modifications to the star frond and it is ready to use it. Now generate a random tree (as described in the relevant chapter) and in the Trunk and Leaf Style section.

Select the custom style option in the leaves style pop-up menu, then by clicking on the arrow button on the right, select the star frond.



Confirm the modifications with the OK button and here is the tree, consisting of a series of star fronds:





## **Problems with Solid Elements Operations**

As already described several times in this manual, all the modelling operations performed on the terrain use Solid Elements Operations.

The shapes used to model the terrain can be extremely complex for ARCHICAD and sometimes (depending on the version used as Graphisoft continues to improve the Solid Elements Operations calculation engine), errors may occur which prevent modelling of the terrain as requested.

We always recommend enabling interruption for error messages to have immediate feedback on the error. In any case, if the Solid Elements Operation is not successful, it will be possible to realize immediately as the terrain will not be modelled, will be partially modelled or there will be errors. To avoid this problem, proceed as follows:

- 1. Try slightly varying the altitude of the operation (the altitude of the plateau or the altitudes of individual nodes of the road).
- 2. Modify the angle of the scarps until the operation is successful (if the error is caused by the shape of a scarp, it can usually be resolved by using an angle creating a steeper scarp).
- 3. Reduce or increase the resolution of curves (it is usually best to unlink this value) modify the scarp continuation value.
- 4. It is, however, difficult to give a general solution as it depends on the specific shape of the terrain and the element involved.




# **SOSI Files Import** (multiple files import option)

For those who works with Norwegian ARCHICAD or in the Norwegian region, Architerra Plus has one more feature: The SOSI import files.

SOSI files are geospatial vector data format predominantly used in Norway and it means in English "Coordinate Approach for Spatial Information". In other words, with SOSI files it is possible to import more data besides just the terrain, such as buildings, roads, fences, etc.

By clicking in the Acquisition of the Terrain button, the user will find below the mesh icon the SOSI import icon.

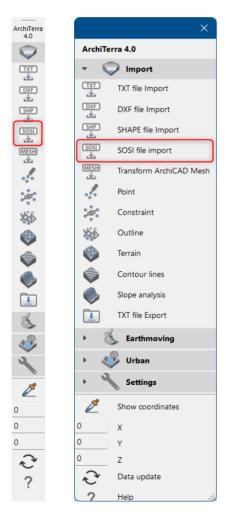



By clicking on this tool, the dialog window comes up and there will be 3 options to import those files: using an independent worksheet, as terrain survey and converting SOSI entities to GDL objects.

🔼 SOSI File	Import		?	×
Sr 💋	Step 1:	Import SOSI file as Independent Worksheet		
<b>T</b>	Step 2:	Import terrain survey from SOSI files		
<b>*</b>	Step 3:	Convert SOSI entities to GDL objects		
			Canc	el

#### **Independent Worksheet**

By clicking in the step 1 a standard open dialog box will appear where the user can select the SOSI file to import directly to the worksheet.

The SOSI File Import dialog box will open then, enabling to choose the layers to import and other settings.


🔼 SOSI File Impo	t		?	×
	Select only the OBJEKTTYPE you w	ant to import:		
		Ų	*	
	$\downarrow$	$\downarrow$	Ļ	
	AnnenBygning	10	1	^
eptar.hu/	Bygning	10	1	
	Bygningsdelelinje	10	1	
	Bygningslinje	10	1	
	FiktivBygningsavgrensning	10	1	
	Hjelpelinje3D	10	1	
	Mřnelinje	10	1	
	Takkant	10	1	
	Takoverbygg	10	1	
	<ul> <li>TakoverbyggKant</li> </ul>	10	1	
	Takplatí	10	1	
	Taksprang	10	1	
×	TrappBygg	10	1	
Ж	Veranda	10	1	
Ē				
Ŧ				$\sim$
ΞŪ	Filter Distance and Settings:			
ARCHITERRA	* 1	100	Ų 10	
M			Cancel	ОК

In this dialog box the user can select the filter distance and settings, the reference ID, and the name of the worksheet.

After the changes the import results dialog box will display showing the coordinates and the number of import results, similar with the one in the Text Files.

There is also the option of limited import, where the user can define values for the coordinates (Xmin, Ymin, Xmax and Ymax).



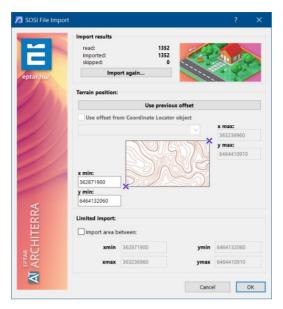

By checking the worksheet, it will be able to see that the Architerra Plus tool palette has some available icons. By clicking in the Acquisition of Terrain Data again, the user can import another file to this same worksheet.

This time, it will not be possible to add another ID and name to the worksheet, considering that is the same worksheet previously created.

ArchiTerra 4.0	88 🕒 (!) 1.	🖉 SOSI File Import	?	×
4.0		Insert SOSI Coordinate Locator		
TXT		Import SOSI files		
DXF	_			
SHP L	_		Cance	1
SOSI	J			
🔟 SC	SI file import 🖌			
		Reference ID of the generated Independent Wo	rkshe	et:
0 100		AT-01		
	-	Name of the generated Independent Worksheet	t:	
6		Kartunderlag		

The user can also insert objects by clicking in the first button of the Acquisition of Terrain Data in the worksheet.

A new standard open dialog box will appear, similar with ARCHICAD object dialog box and there the user can select the objects from the Architerra Plus Library.



## **Terrain Survey to SOSI file**

With this option, the user can import the SOSI files to the workspace and then use the other tools from Architerra Plus palette.

The process is like the previous step. A standard open dialog box will appear enabling to choose the SOSI file.

Once select a *SOSI Import dialog box* will show the layers and settings. In this case, the user can link the layers, like in the Text files.

🔼 SOSI File Import	:			? ×
	Select only the OBJEKTTYPE y	ou want to import:		
ΈN		Ų	<b>*</b> ↓	
	Forsenkningskurve	10	1	^
eptar.hu/	Hřydekurve	10	1	
11	Terrenglinje	10	1	
/ / / /	Terrengpunkt	10	1	
111				
<	Filter Distance and Settings:			
eptar ARCHITERRA		100	Ų 1	
Ē	* 0	- 100	¥	
듶				
SC A	Reference ID of the generated	Independent Worksheet:		
AF	AT-01			
M	Name of the generated Indepe	ndent Worksheet:		
			Cancel	ОК

By selecting the layers, filter distance and settings, the import results dialog box with the number of imported data will open.



Import results read: imported: skipped:	81 81 0		
Imp	ort again		a y
Terrain position:			
-	Use previo	us offset	
		~	36354840
<b>x min:</b> 362481400 <b>y min:</b> 6463732920			36354840 <b>y max:</b> 64649217
362481400 <b>y min:</b>	between:	<u> </u>	y max:
362481400 y min: 6463732920	between: 362481400	ymin	y max:

In this case, the user can use the same coordinates as used for the worksheet before (if it was created one) or choose new values. The user can also add and altitude filter for their imported data, considering the first altitude and the final, besides the equidistance between the points.

When the user click ok the same SOSI dialog box from the step 1 appear to choose the coordinates again. Then click ok. The points will be displayed in the worksheet.


### **Convert SOSI entities to GDL objects**

In this step the data what the user needs to import will placed in the worksheet as a GDL object, with hotspots and polylines and not points representing coordinates like in the previous steps.



For create these objects, click on the step 3, and select the file to import. Then choose the desired layers to import. The similar dialog boxes from the steps 1 and 2 will open and it will be able to select the layers and setting in the first and the coordinates in the second.

Then the ARCHICAD object window will open. In this part the user will be able to choose how would like to represent the object in the worksheet, as a 3D polygon, 3D surfaces or 3D solid.

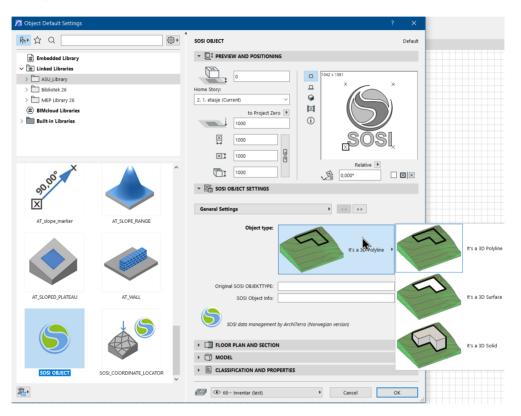

Then just click Ok.

As a result, the terrain and different objects (buildings, roads, etc) will be converted from SOSI data into the 3D models.

